




Constructed of Glass Fiber Reinforced Concrete (GFRC), the Barrel Crawl is handcrafted and replicates the look of a wooden barrel.



Barrel Crawl 1000203

L: 4'-0" x W: 3'-4" x H: 2'-8"
1,350 LBS

Installation Instructions

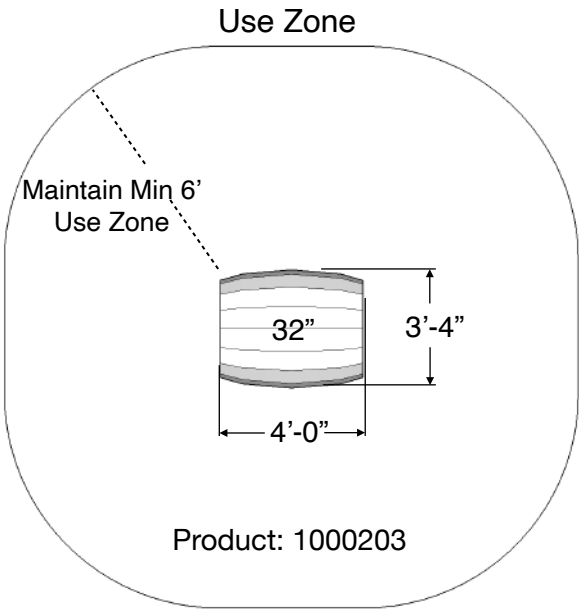



Included Items:

Part #	Item	Description	Quantity
1000203	Barrel Crawl	Play Equipment	1
HK128	Anchor Bolt 1/2" x 3"	Mounting Hardware	4

~ All dimensions are approximate ~
User Group Age: 2-12
Last Revised 3/24/2026

2401 Edgewood Ave S • Suite 200
St. Louis Park, MN 55426
612.670.8195
info@cre8play.com
cre8play.com

Installation Instructions

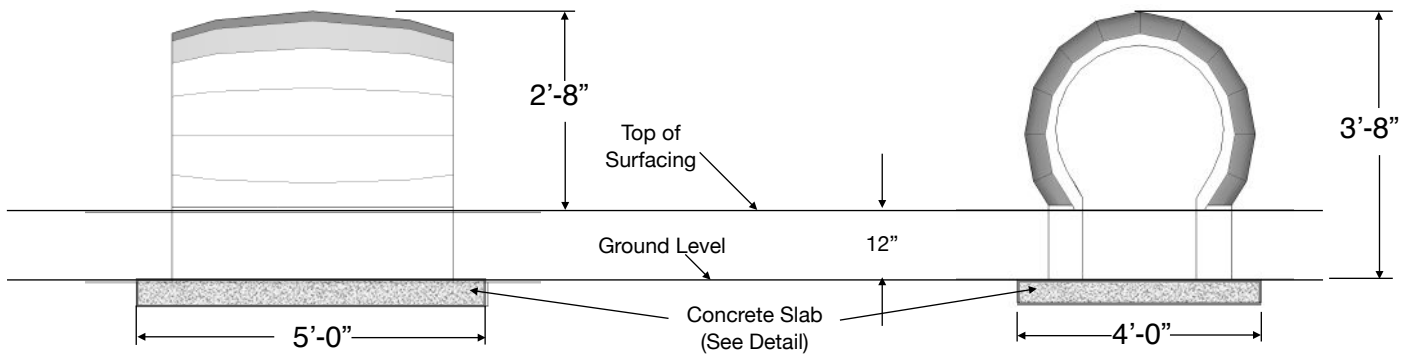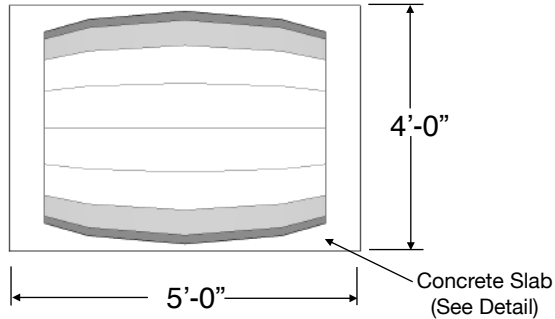

Product: 1000203

If you determine that less than 12" of surfacing is required, make sure the top of the concrete slab is 12" below the top of the protective surfacing.


Installation Instructions

NOTE: Read installation instructions thoroughly before starting installation process.

Step 1: Lay out the area and prepare the site for install. Concrete must be installed over a solid, level base. Check local soil condition and codes. See installation instructions for minimum use zone requirements to ensure proper spacing and adequate surfacing area.


Step 2: Pour a concrete base for the crawl. Refer to the typical slab section on this page. The concrete should be flush with the ground level. Allow time for the concrete to completely cure before continuing.

Step 3: Using an appropriate lull-type forklift or boom, place crawl into final installation location. See the hardware recommendation page for information on anchoring equipment down to your slab. Refer to the surfacing manufacturer for installation of an approved impact attenuating play surface around the crawl with a minimum of 6 feet in every direction.

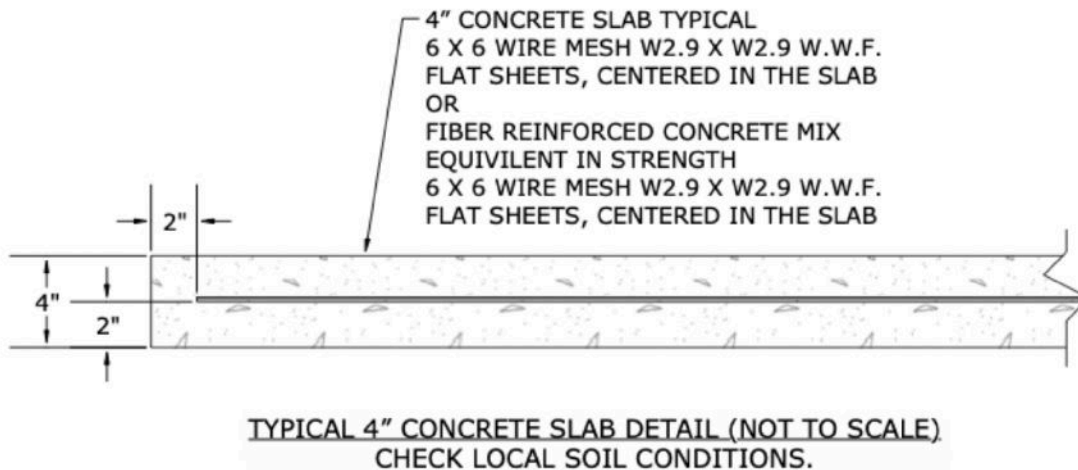

NOTES PRIOR TO CONSTRUCTION:

- Use appropriate equipment to lift and move the play equipment.
- Check local codes and requirements prior to digging or installing any equipment.

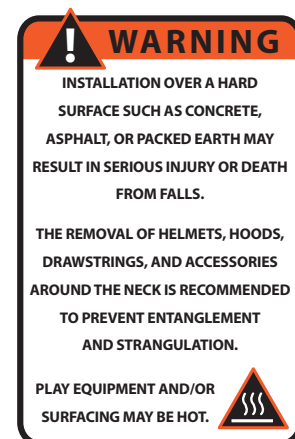

Installation Instructions


Step 4: Locate your anchor bolts, supplied by Cre8Play. Using the proper standard drill bit size noted in the installation table, drill the concrete to the appropriate hole depth (C).

Step 5: Insert the anchor bolt into the hole and tighten until the bolt is fully seated. Do NOT over tighten the anchor bolts.


Installation Table

Anchor Bolt Size	ANSI Standard Drill Bit Diameter	Anchor Head (Socket Size) Diameter Ⓐ	Minimum Embedment Ⓑ	Hole Depth Ⓒ
1/2" x 3"	7/16"	3/4"	2 1/2"	3 1/2"


Anchor Bolt (Large Diameter Tapcon)
Installation:

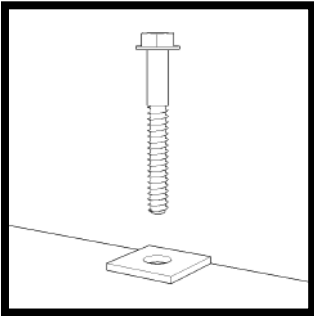


Mounting Detail
(Not to Scale)

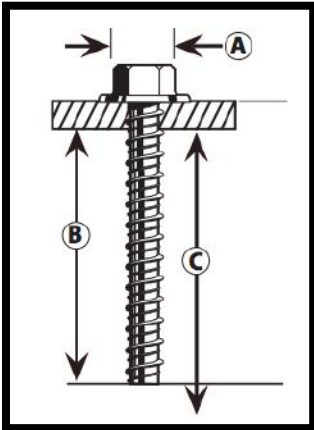

Step 1: Drill

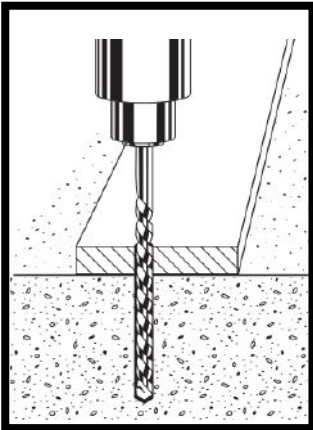

Step 2: Anchor

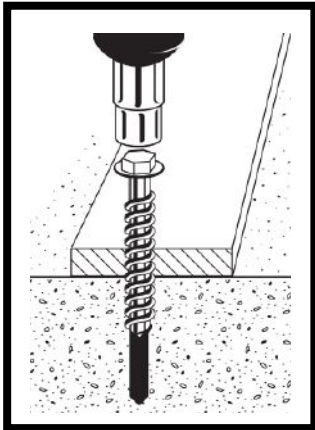

NOTE: Always wear eye protection appropriate to the task at hand.