






A fun farm themed climber with varying degrees of climbing difficulties. Constructed of durable Glass Fiber Reinforced Concrete (GFRC). The unique design allows for 360 degrees of climbing, integrated handholds, realistic texture.

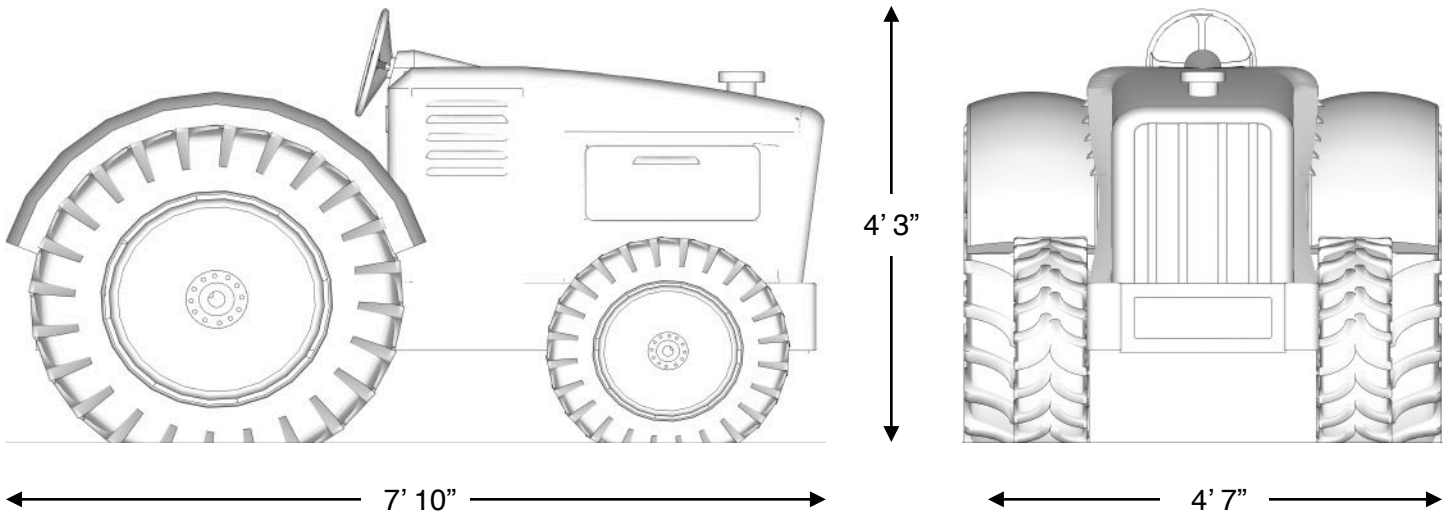

L: 7' 10"
W: 4' 7"
H: 4' 3"
2,300 LBS

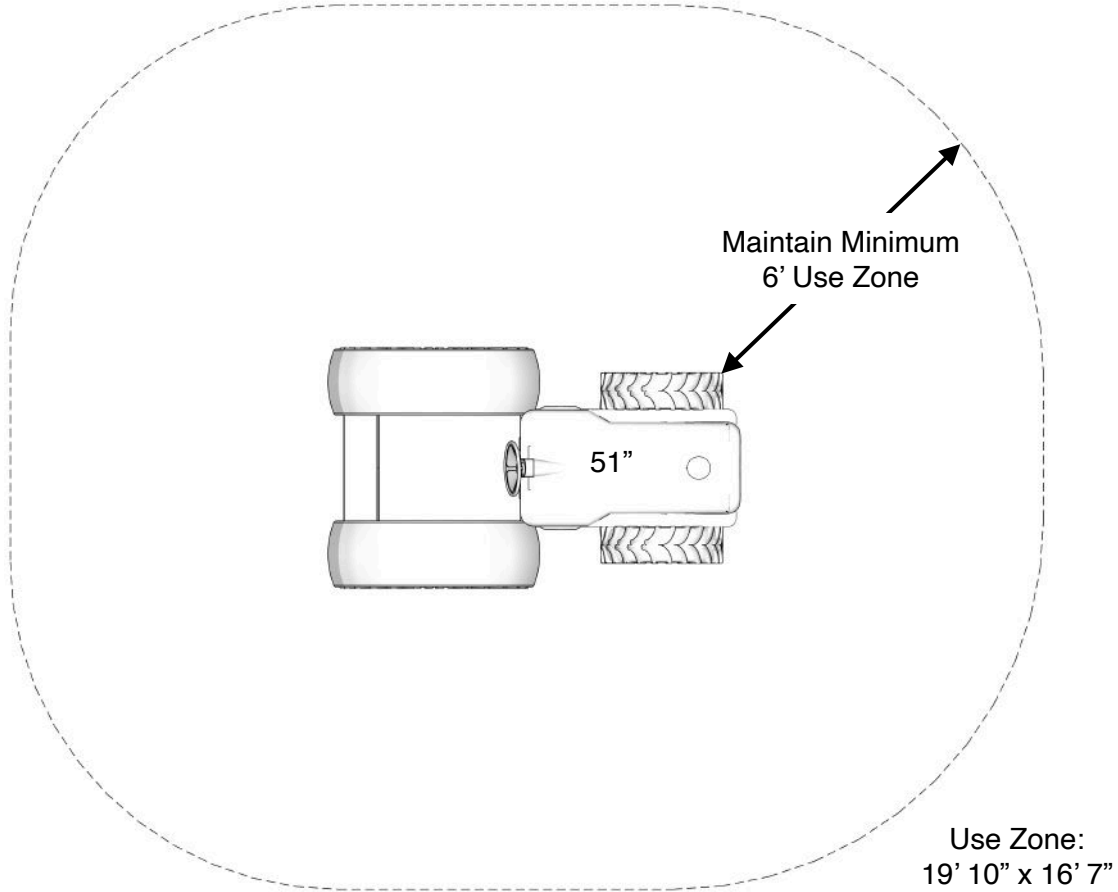


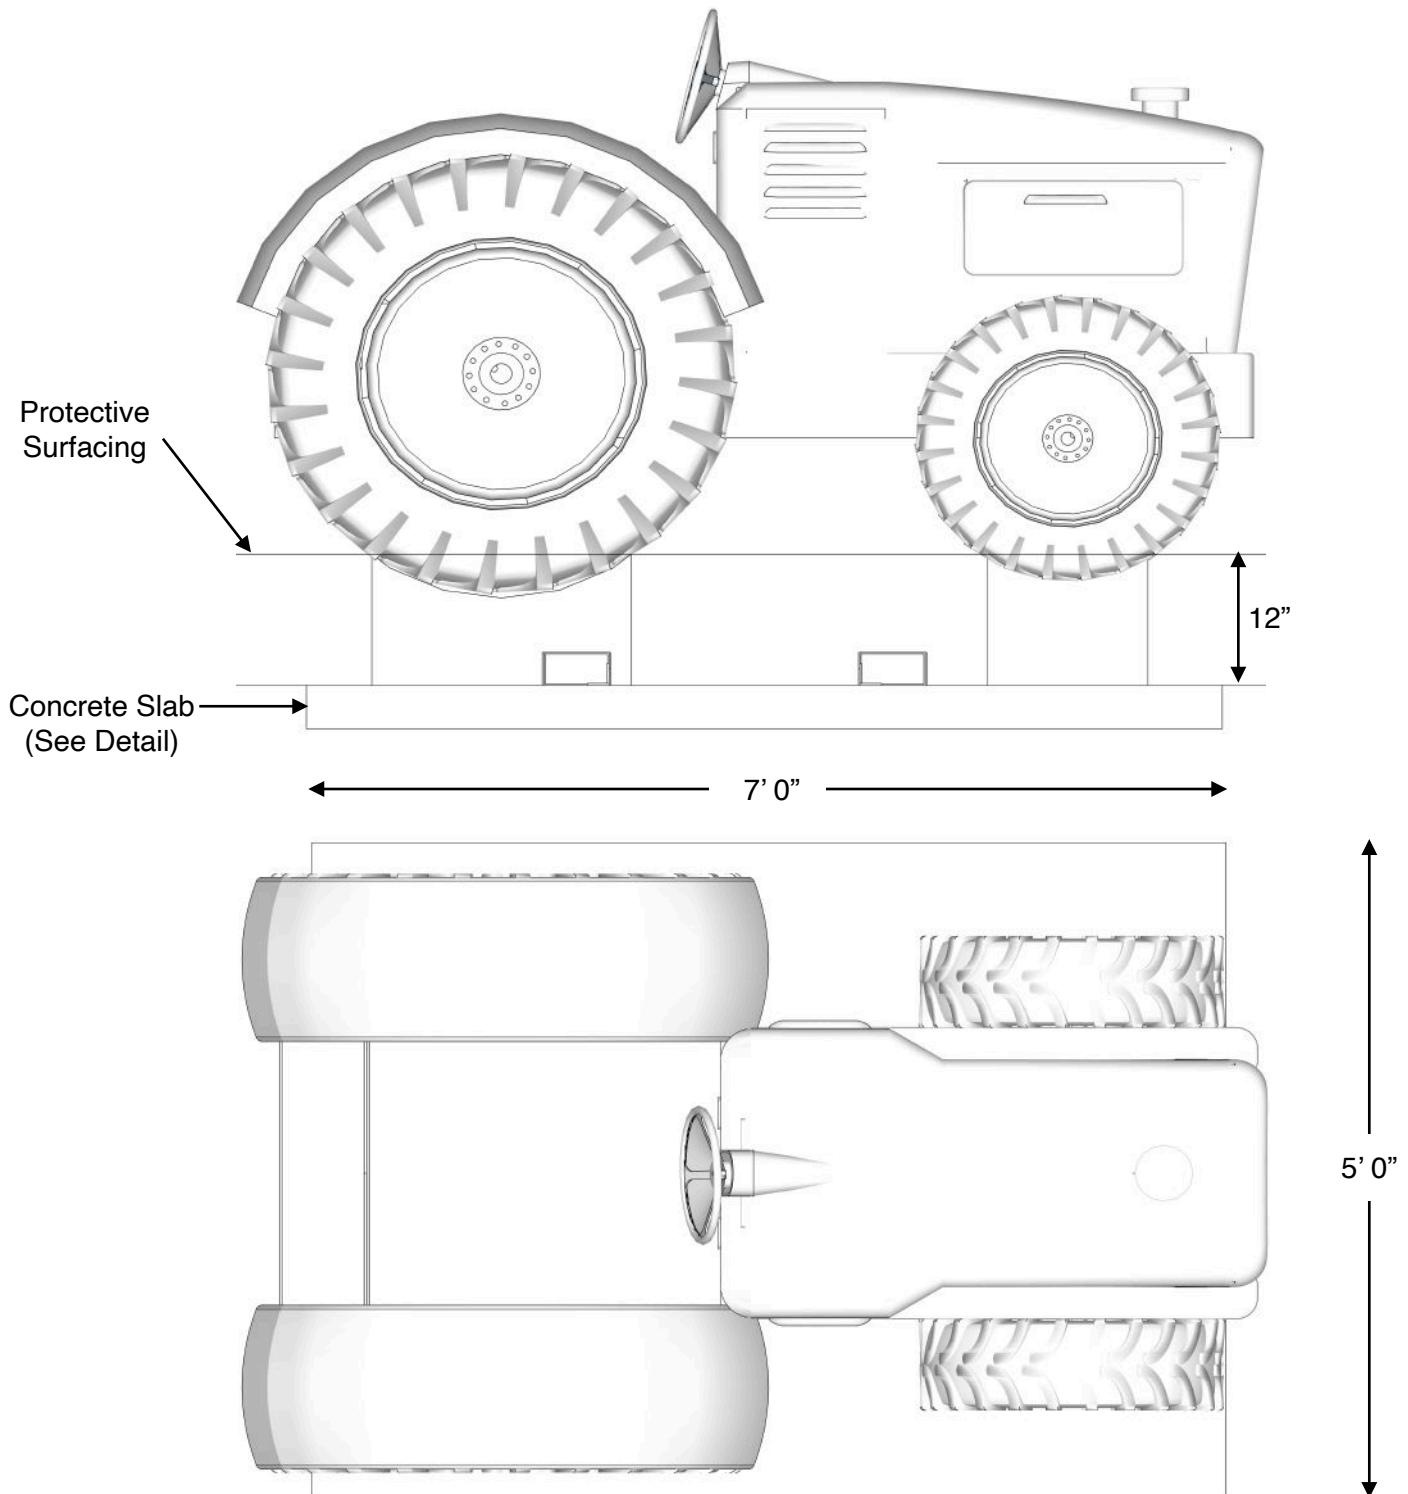

If you determine that less than 12" of surfacing is required, make sure the top of the concrete slab is 12" below the top of the protective surfacing.

NOTES PRIOR TO CONSTRUCTION:


- Use appropriate equipment to lift and move the play equipment.
- Check local codes and requirements prior to digging or installing any equipment.

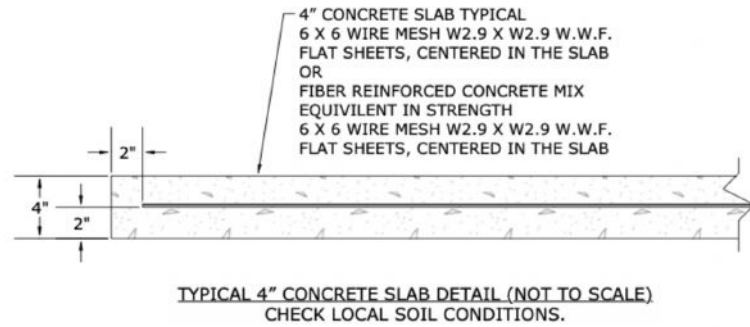


EXAMPLE OF COMPONENT



ANCHOR BOLT
SEE CHART

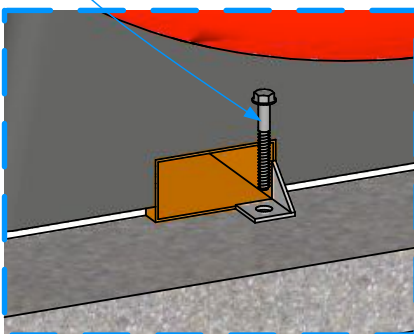

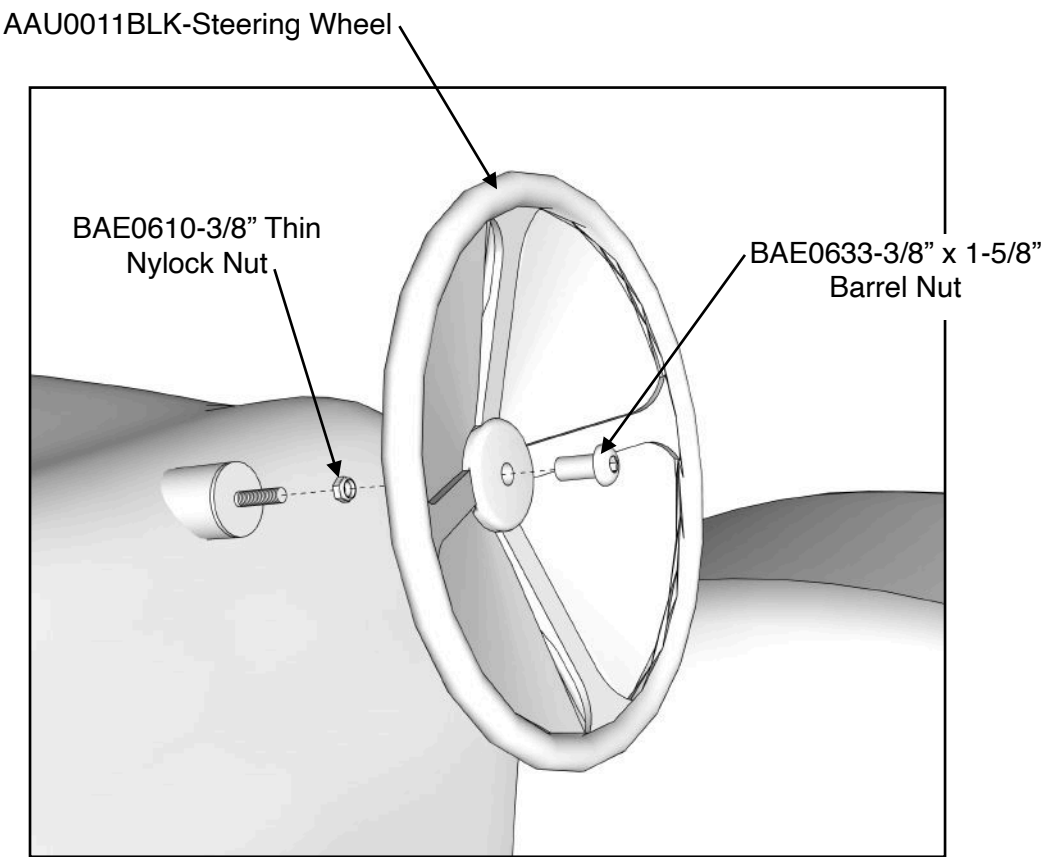

HK160-Steering Wheel Hardware Kit

Included Items:

Part #	Hardware #	Item	Description	Quantity
1000286		Tractor Climber	Play Equipment	1
AAU0011BLK		Steering Wheel	Play Equipment	1
HK128		Anchor Bolt 1/2" x 3"	Mounting Hardware	4
HK160	BAE610	3/8"-16 Thin Nylock Nut	Hardware	1
HK160	BAE633	3/8"-16 x 1-5/8" Barrel Nut	Hardware	1

NOTE: Read installation instructions thoroughly before starting installation process.

Step 1: Lay out the area and prepare the site for install. Concrete must be installed over a solid, level base. Check local soil condition and codes. See product installation instructions for minimum use zone requirements to ensure proper spacing and adequate surfacing area.

Step 2: Pour a concrete base for the component. Refer to the typical concrete slab section in this document. The concrete should be flush with the ground level. Allow time for the concrete to completely cure before continuing.

Step 3: Using an appropriate forklift or boom, place component into final installation location. See the hardware recommendation for information on anchoring equipment down to your concrete slab. Refer to the surfacing manufacturer for installation of an approved impact attenuating play surface around the component with a minimum use zone in every direction.

Step 4: Locate your anchor bolts, supplied. Using the proper standard drill bit size noted in the installation table, drill the concrete to the appropriate hole depth through the mounting holes.


Step 5: Insert the anchor bolt into the hole and tighten until the bolt is fully seated. Do NOT over tighten the anchor bolts.

Step 6: Install the steering wheel by first threading on the thin nylock nut onto the steering wheel threaded shaft. Slide the steering wheel over the shaft and thread on the barrel nut, as shown on page 5.


Anchor Bolt Installation:

Anchor Bolt Size	ANSI Standard Drill Bit Diameter	Anchor Head (Socket Size)	Minimum Embedment	Hole Depth
1/2" x 3"	7/16"	3/4"	2 1/2"	3 1/2"
5/8" x 4"	1/2"	13/16"	3 1/2"	4 1/2"
5/8" x 6"	1/2"	13/16"	5 1/2"	6 1/2"

Step 1: Drill

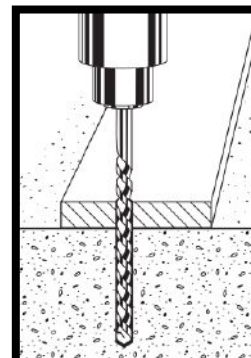

Step 2: Anchor

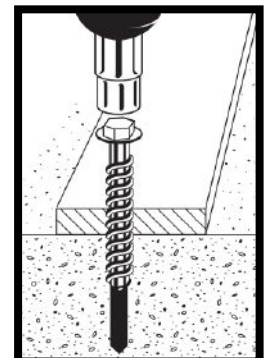

NOTE: Always wear eye protection appropriate to the task at hand.