






FA4300	FA4301	FA4302	FA4311	FA4313	FA4314
L: 1' 3"	L: 2' 6"	L: 4' 9"	L: 1' 3"	L: 2' 6"	L: 4' 9"
W: 2' 8"	W: 2' 8"	W: 2' 8"	W: 2' 8"	W: 2' 8"	W: 2' 8"
H: 4' 6"	H: 5' 6"	H: 6' 6"	H: 3' 4"	H: 4' 9"	H: 5' 9"
140 LBS	260 LBS	400 LBS	105 LBS	230 LBS	340 LBS

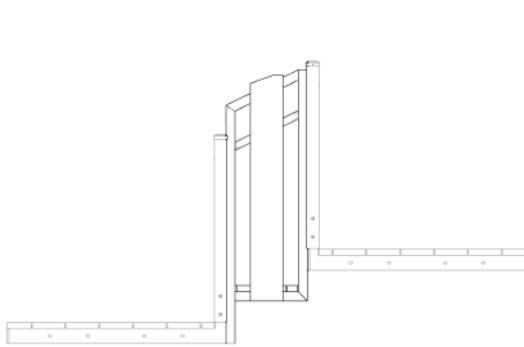


FA4311
Accessible Step Link - 1' Rise
(2-5 Structures Only)

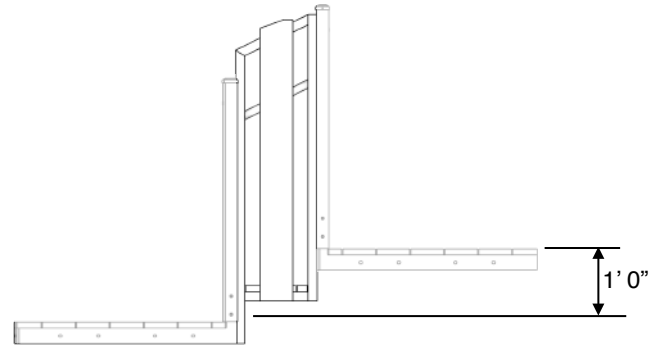


FA4300
Accessible Step Link - 1' Rise

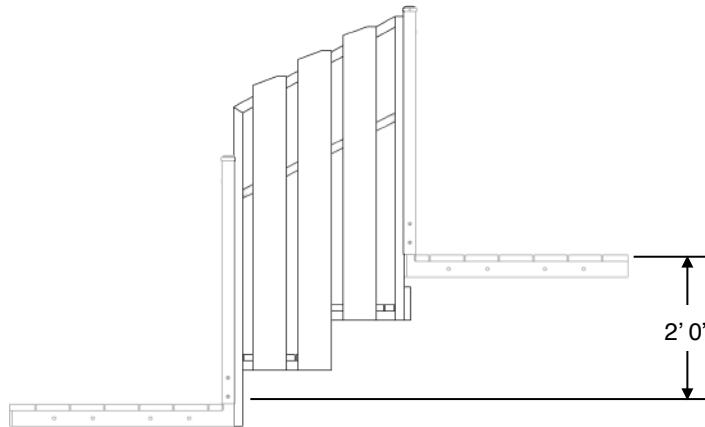


FA4301
Accessible Step Link - 2' Rise

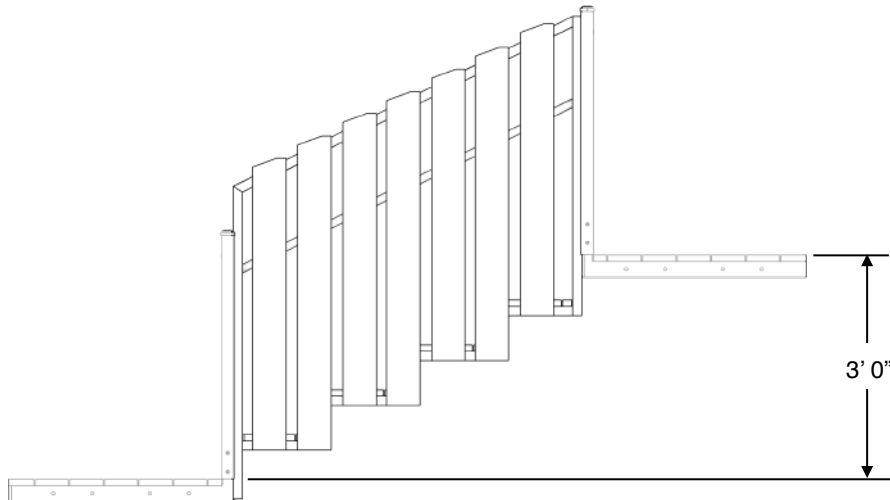


FA4302
Accessible Step Link - 3' Rise

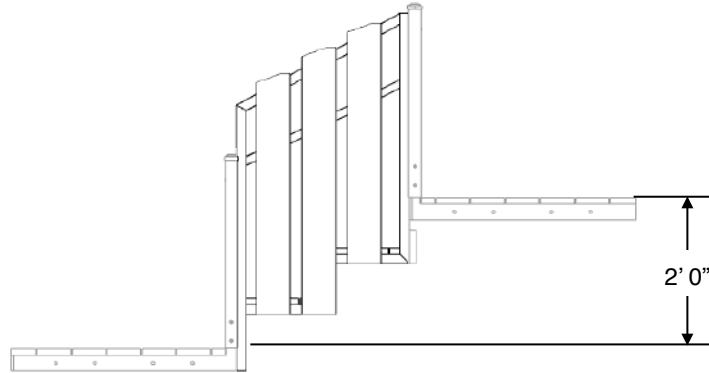



FA4313
Accessible Step Link - 2' Rise
(2-5 Structures Only)

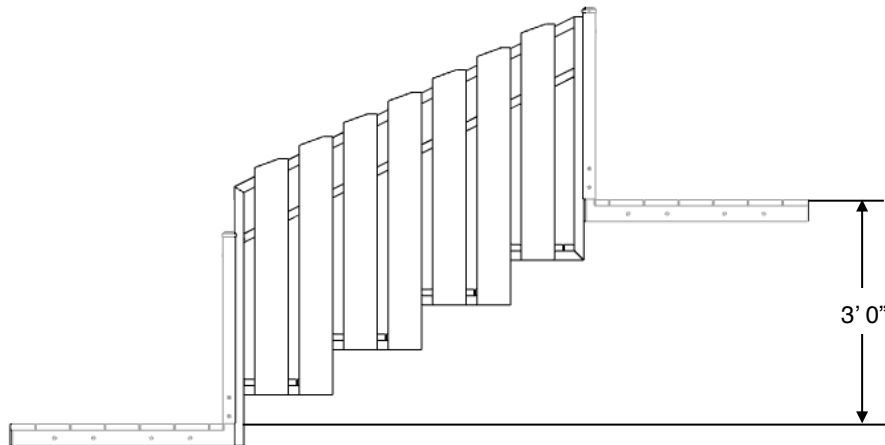


FA4314
Accessible Step Link - 3' Rise
(2-5 Structures Only)

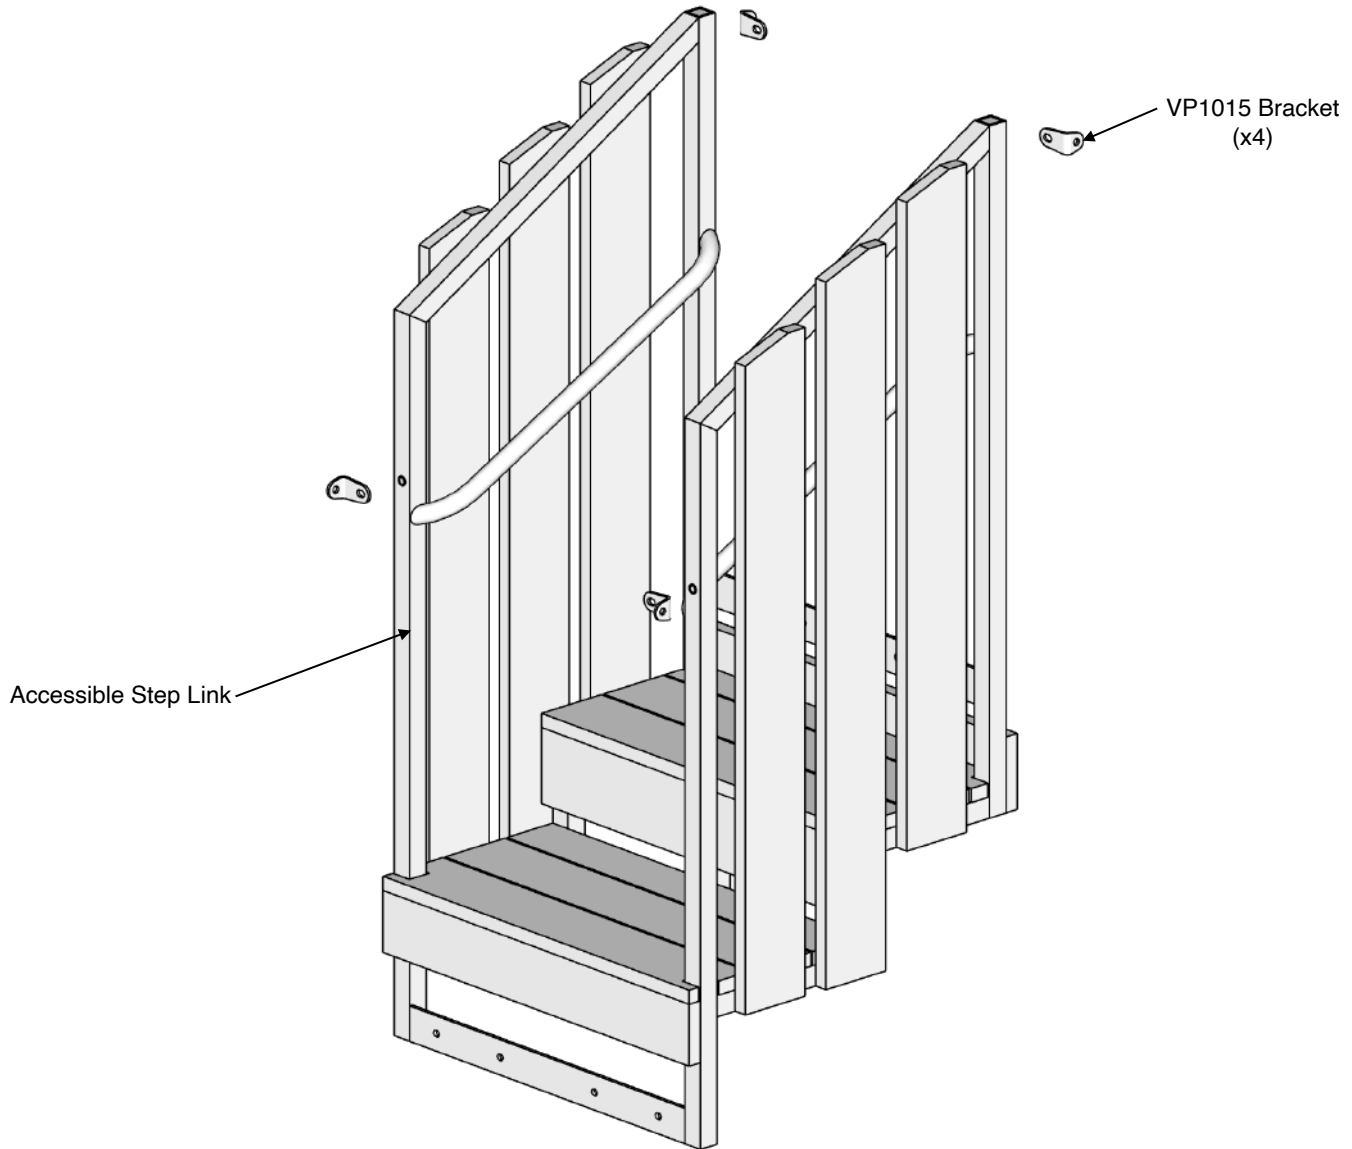

Exploded View

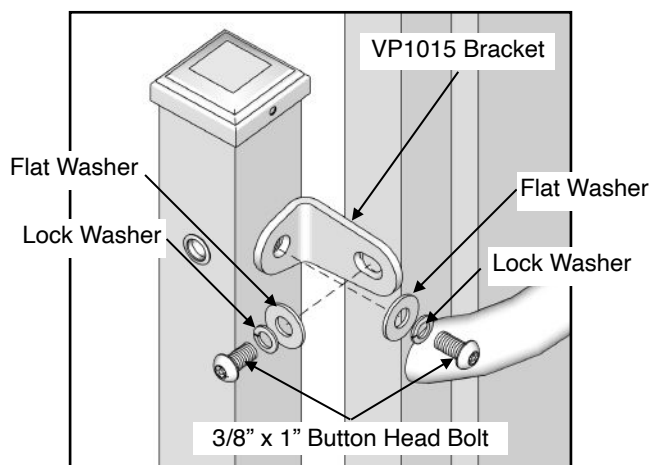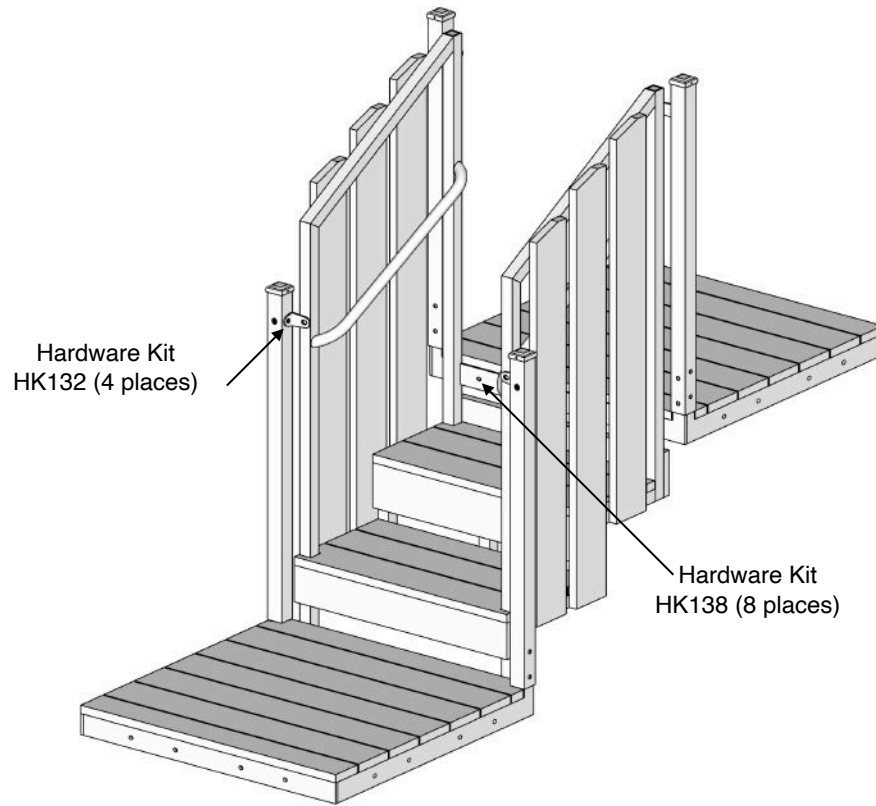

Hardware Detail HK132

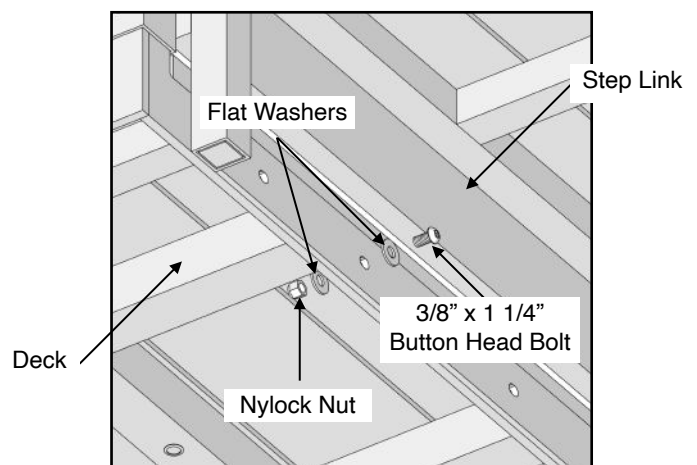

Hardware Detail HK138

NOTE: Read installation instructions thoroughly before starting installation process.

Step 1: Locate the Accessible Step Link. Bolt the Step Link to the Deck using hardware kit HK138 (4 places). Bolt the other end of the Step Link to the opposing Deck using hardware kit HK138 (4 places).


Step 2: Using hardware kit HK132, bolt the VP1015 Bracket to the Step Link and Post (4 places).

Step 3: Once the entire play system is built, pour the concrete footings. The concrete should be flush with the ground level, as shown in the typical in-ground footing detail. Allow time for the concrete to cure completely before continuing.

Step 4: Remove temporary bracing.

Included Items:

Part #	Item	Description	Quantity
Varies	Accessible Step Link	Play Equipment	1
HK132	VP1015	Bracket (VP1015)	4
HK132	HDW-44	3/8" x 1" Button Head Torx Pin-in Bolt, SS	8
HK132	HDW-15	3/8" Split Lock Washer, SS	8
HK132	HDW-25	3/8" Small Flat Washer, SS	8
HK138	HDW-8	3/8" x 1-1/4" Button Head Torx Pin-in Bolt, SS	8
HK138	HDW-25	3/8" Small Flat Washer, SS	16
HK138	HDW-38	3/8" Nylock Nut, SS	8

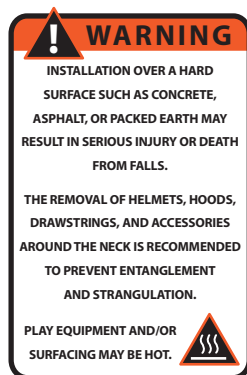

NOTES PRIOR TO CONSTRUCTION:

- Use appropriate equipment to lift and move the play equipment.
- Check local codes and requirements prior to digging or installing any equipment.

NOTE: Always wear eye protection appropriate to the task at hand.

Use thread lock on all fasteners.
Cut bolt ends off with more than 2 exposed threads.