



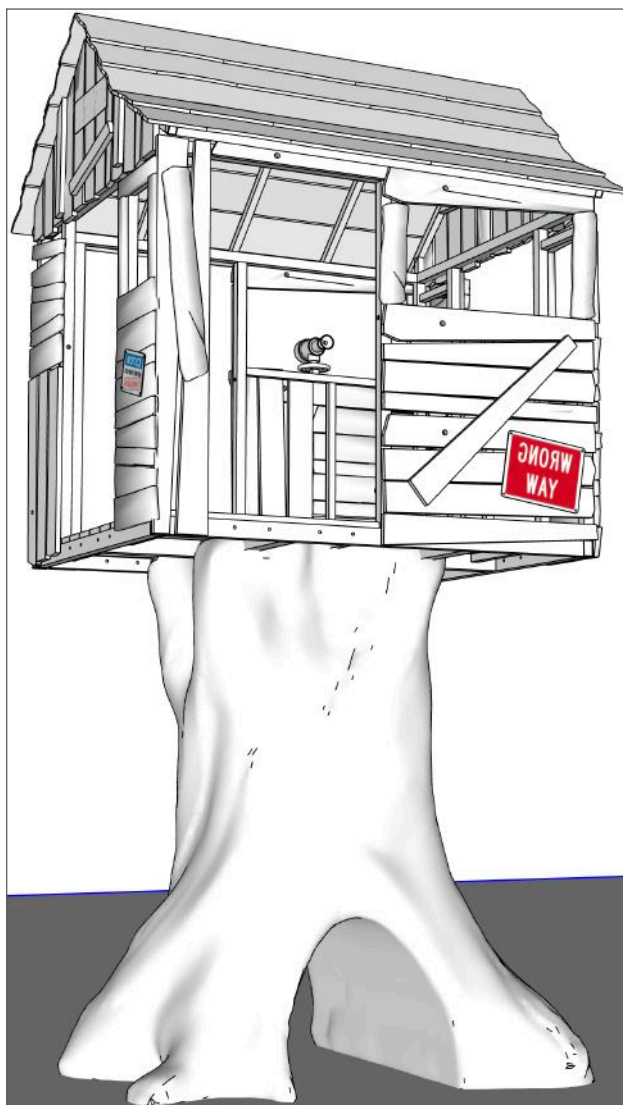


A Gr8 addition to the Deep Woods line. The Tree House offers a 8' high deck that measures 5'-6" x 7'-0" and has 4 Deep Woods modular openings. The tree has a unique crawl through and is very realistic! Constructed of durable Glass Fiber Reinforced Concrete (GFRC) steel and composite lumber.

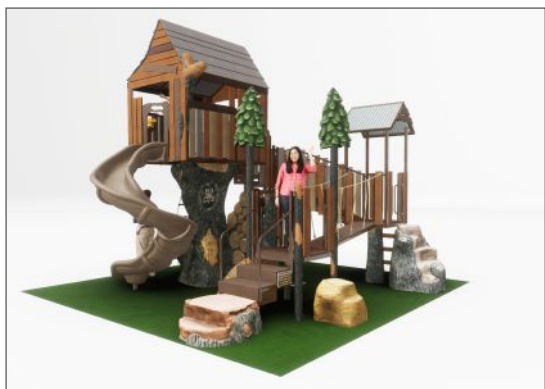


Tree In-ground	Tree Surface mount
FA3000	FA3000S
L: 7' 0"	L: 7' 0"
W: 6' 4"	W: 6' 4"
H: 9' 0"	H: 8' 2"
4,000 LBS	3,600 LBS



House In-ground	House Surface mount
FA3000	FA3000S
L: 7' 9"	L: 7' 9"
W: 6' 6"	W: 6' 6"
H: 8' 2"	H: 8' 2"
1,300 LBS	1,300 LBS

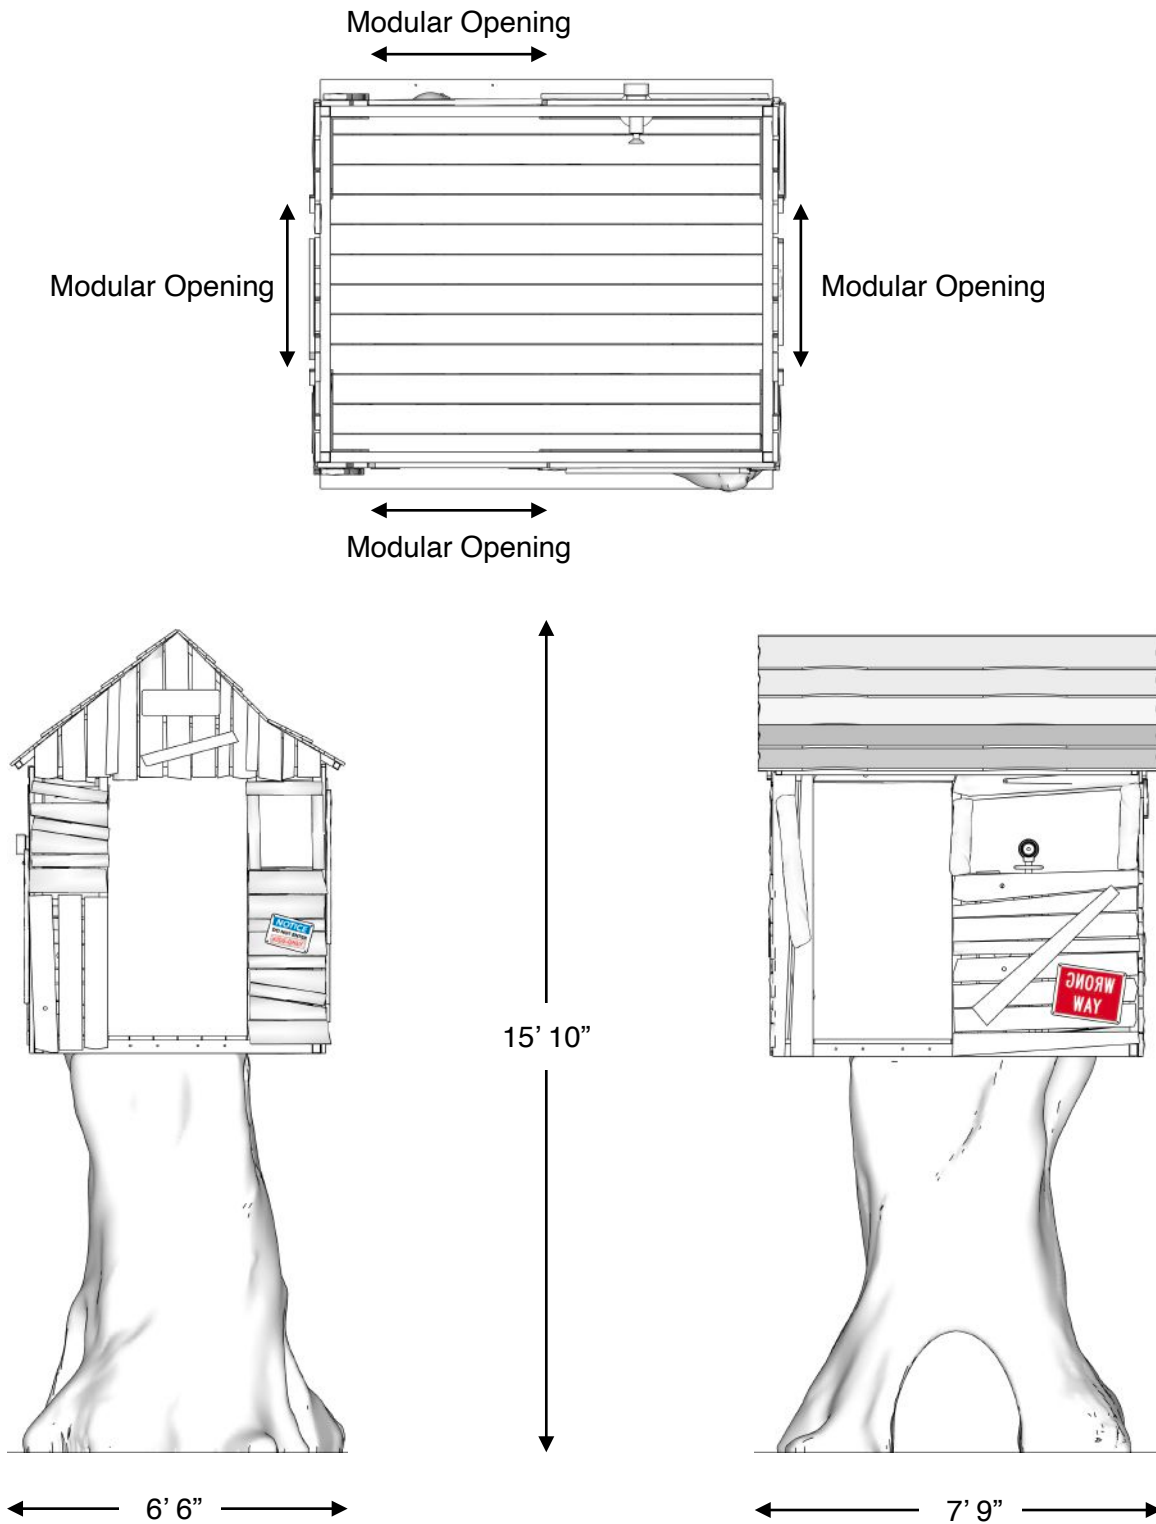


FA3000

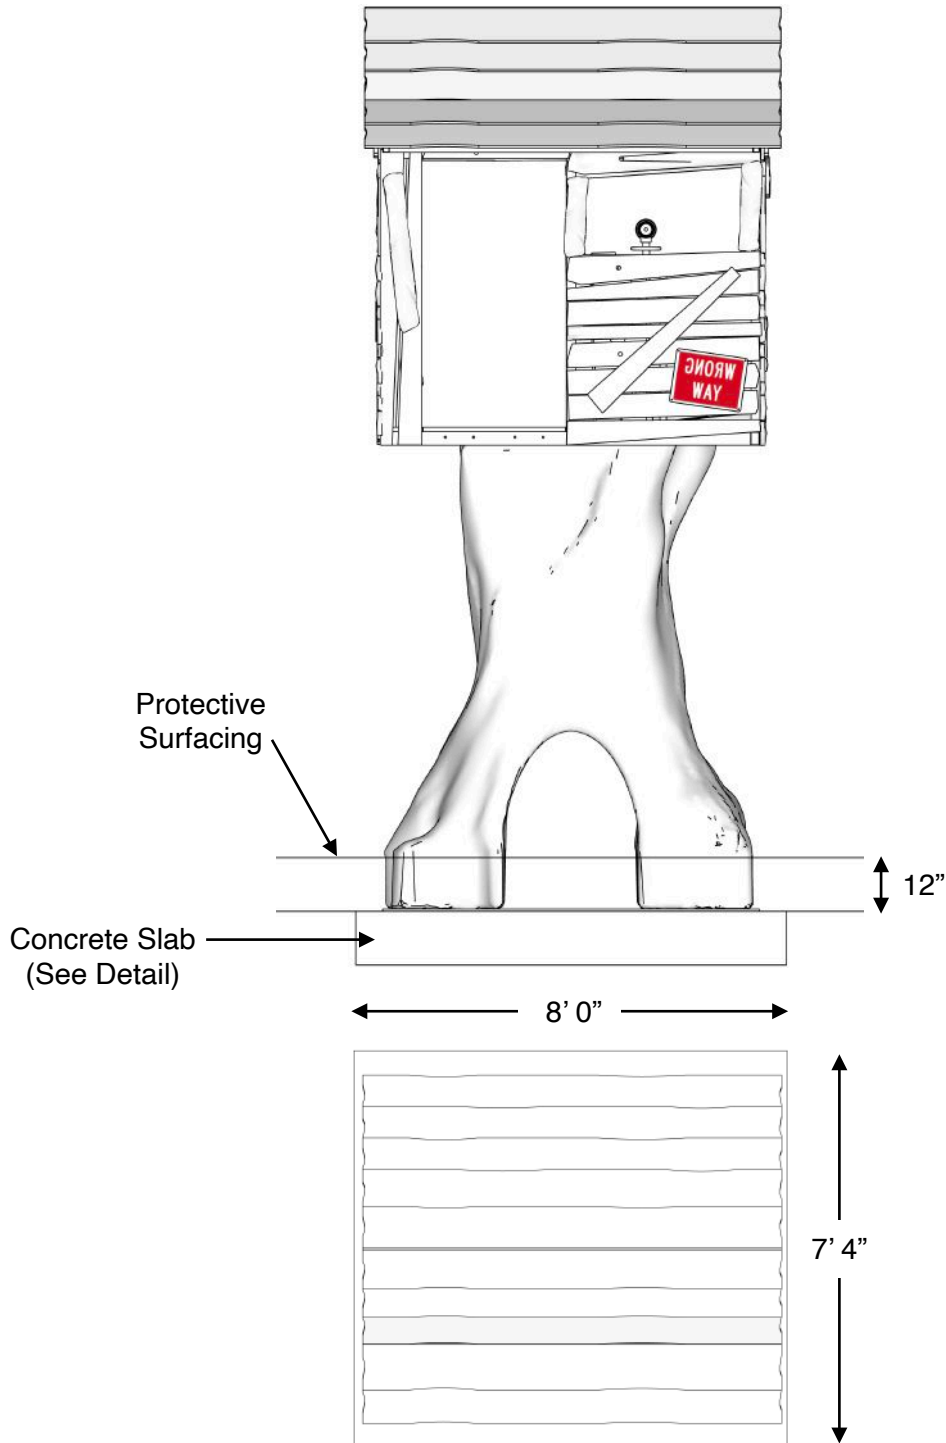


If you determine that less than 12" of surfacing is required, make sure the top of the concrete slab is 12" below the top of the protective surfacing.

FA3000S

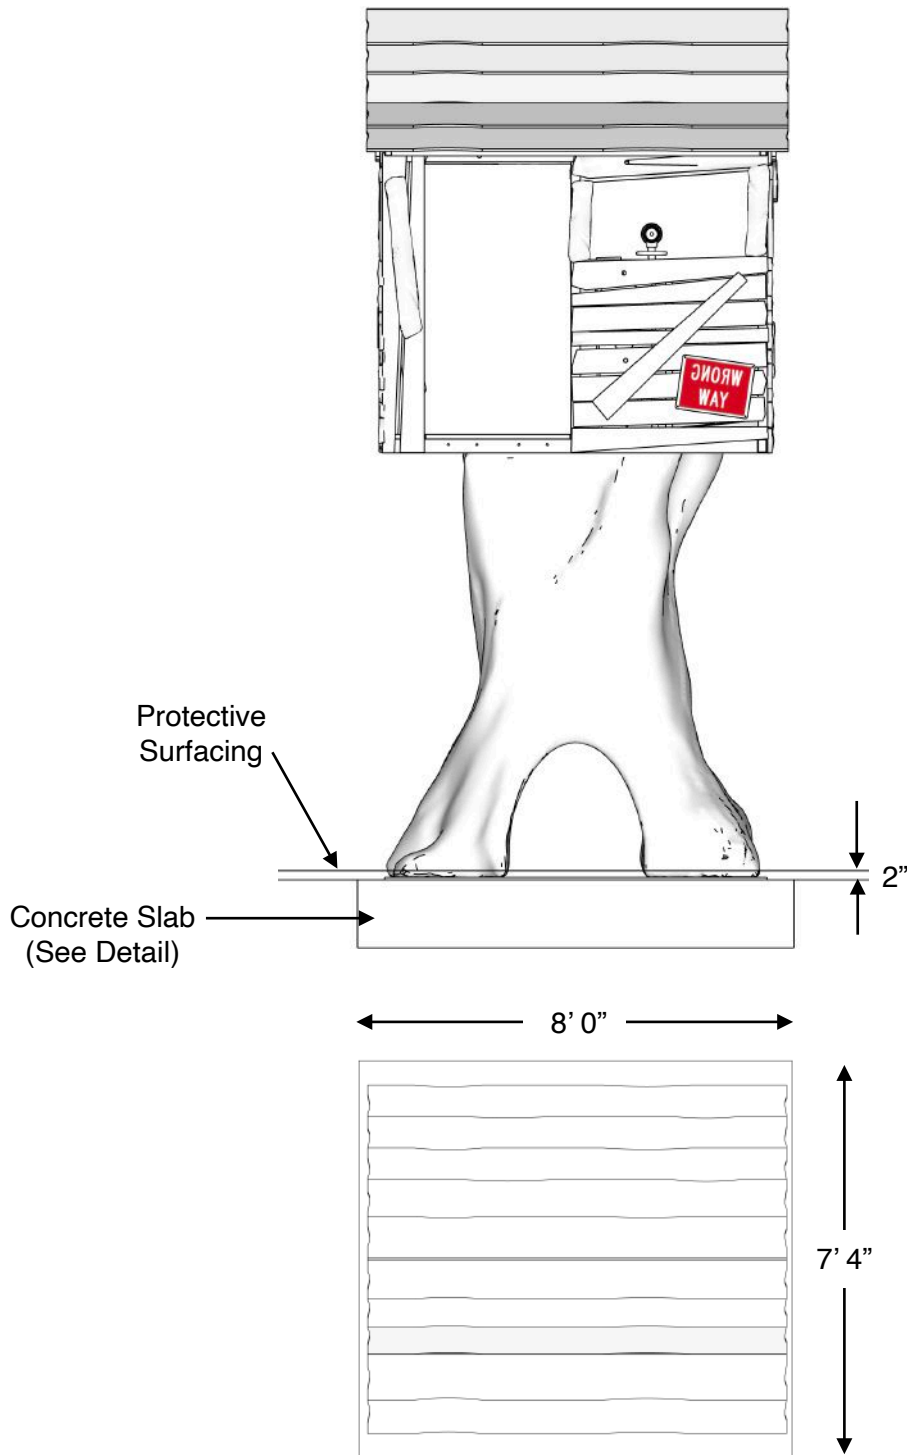

NOTES PRIOR TO CONSTRUCTION:


- Use appropriate equipment to lift and move the play equipment.
- Check local codes and requirements prior to digging or installing any equipment.

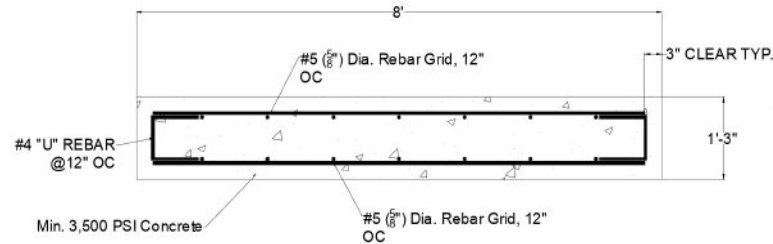

EXAMPLE OF COMPONENT



ANCHOR BOLT
SEE CHART

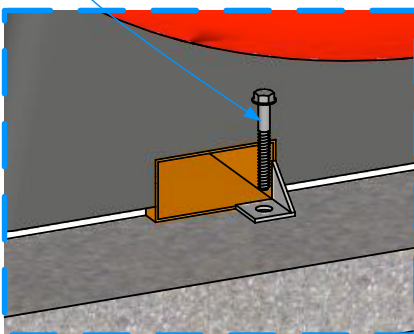

NOTE: Read installation instructions thoroughly before starting installation process.

Step 1: Lay out the area and prepare the site for install. Concrete must be installed over a solid, level base. Check local soil condition and codes. See product installation instructions for minimum use zone requirements to ensure proper spacing and adequate surfacing area.

Step 2: Pour a concrete base for the component. Refer to the typical concrete slab section in this document. The concrete should be flush with the ground level. Allow time for the concrete to completely cure before continuing.


Step 3: Noting where the modular openings are on the tree base and using an appropriate forklift or boom, strap the tree using four 6 foot, 9,000 lb rated lifting straps. Place tree base into final installation location. See Illustration step 3.

Step 4: Using the appropriate fork lift, lift the house on top of the tree base. You will need a forklift with 6 foot long forks, minimum. Clamp 2 x 4 blocks to the houses top window frame to avoid damaging the house with the forks. See Illustration step 4.


Step 5: Bolt the house to the tree using hardware kit HK006 (12 places). Install the two composite floor boards using the #12-24 x 2" self drilling flat head square drive screws. Use 2 screws per frame member (5 places, each board). See Illustration step 5.

Step 6: Assemble the telescope assembly and bolt to the house using hardware kit HK134 (4 places). See Illustration step 6.


Step 8: Complete building the rest of the Deep Woods components following their individual instructions. Insert the anchor bolt into the hole and tighten until the bolt is fully seated. Do NOT over tighten the anchor bolts. See the hardware recommendation for information on anchoring equipment down to your concrete slab. Refer to the surfacing manufacturer for installation of an approved impact attenuating play surface around the component with a minimum use zone in every direction.

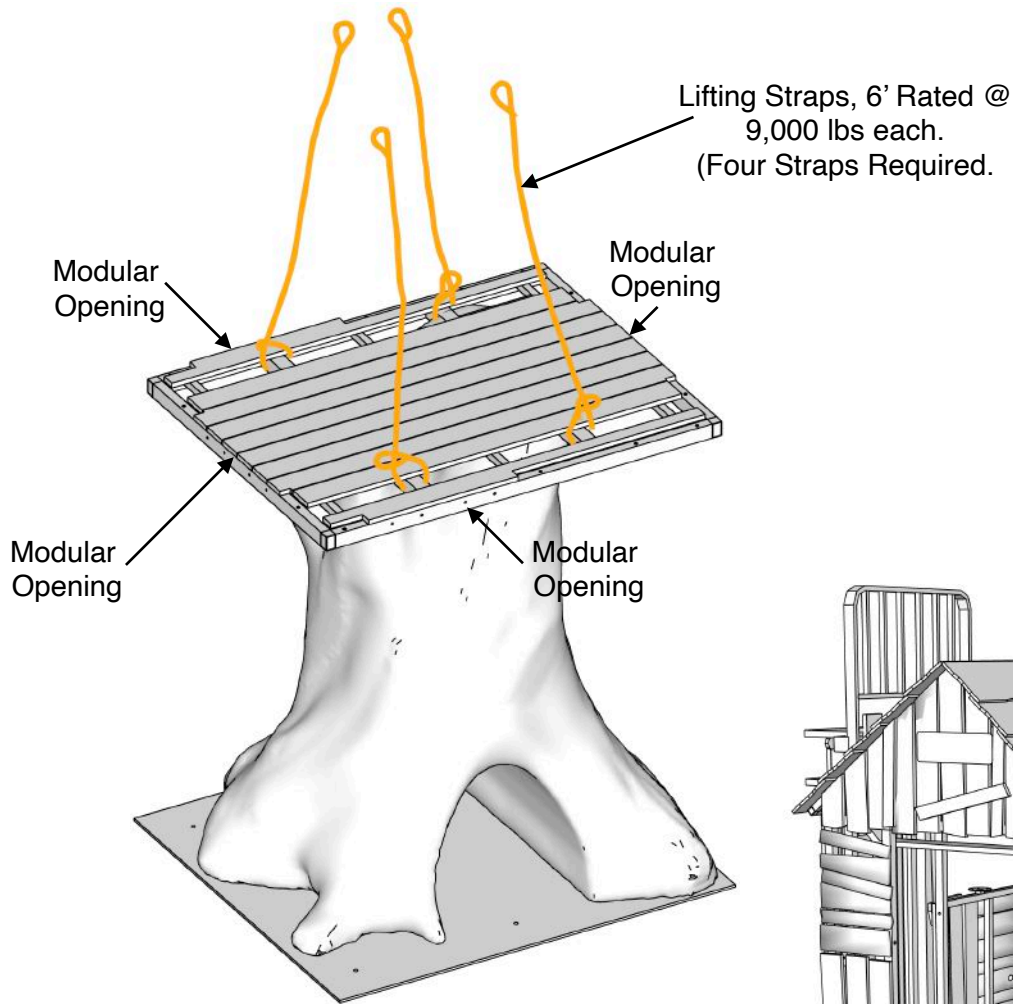

Step 3

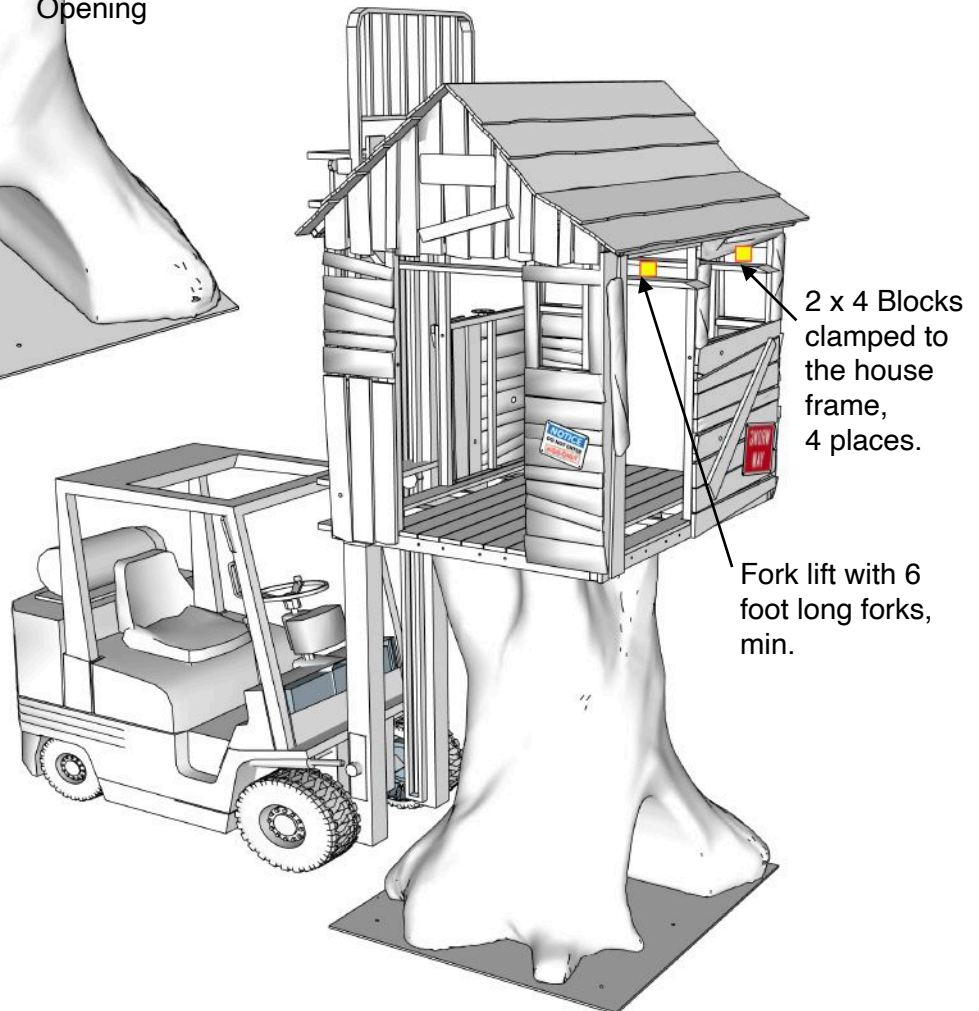

Step 4

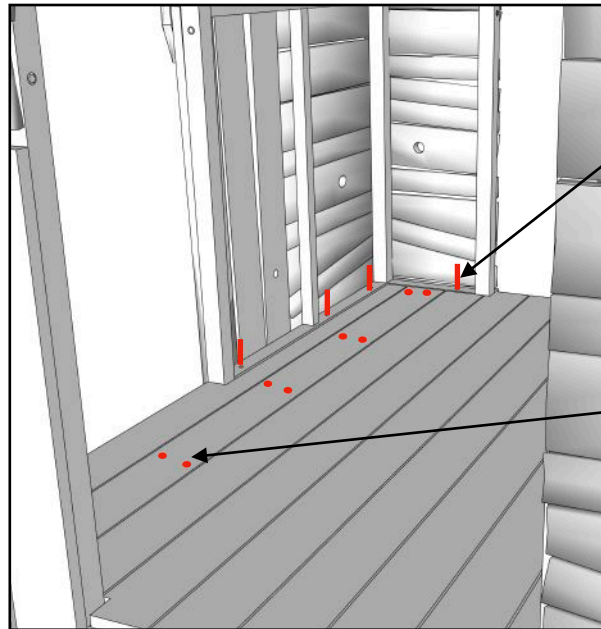


3/8" x 1 3/4"
Button Head Bolt,
Lock Washer, &
Flat Washer
(12 places)

Deck screws
#12-24 x 2" self
drilling screws
(10 places, ea.
board)

Hardware Kit HK006 & HK149

Step 5

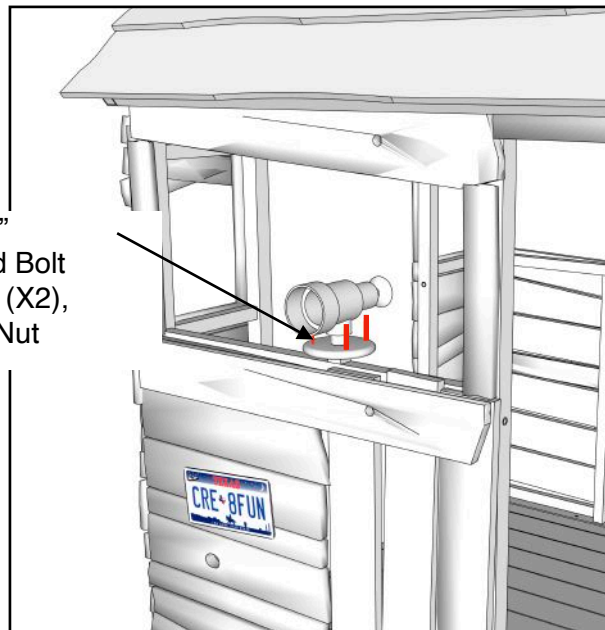

1/4" x 1"
Button Head Bolt
Flat Washer (X2),
& Nylock Nut

Hardware Kit HK134

Step 6

FA3000


Included Items:

Part #	Item	Description	Quantity
FA3000	Tree Base	Play Equipment	1
FA3000	House	Play Equipment	1
FA3000	Telescope	Play Equipment	1
FA3000	1" x 5-3/8" Composite Boards	Play Equipment	2
HK149	1220-F41-K	#12-24 x 2" self drilling deck screws	20
HK006	HDW-10	3/8" x 1-3/4" Button Head Torx Pin-in Bolt, SS	12
HK006	HDW-24	3/8" Flat Washer, SS	12
HK006	HDW-15	3/8" Split Lock Washer, SS	12
HK134	HDW-33	1/4" x 1" Button Head Bolt, SS	4
HK134	HDW-42	1/4" Nylock Nut, SS	4
HK134	HDW-34	1/4" Flat Washer, SS	8
HK130	HDW-18	5/8" x 4" Tapcon Anchor	8


Anchor Bolt Installation:

Anchor Bolt Size	ANSI Standard Drill Bit Diameter	Anchor Head (Socket Size)	Minimum Embedment	Hole Depth
1/2" x 3"	7/16"	3/4"	2 1/2"	3 1/2"
5/8" x 4"	1/2"	13/16"	3 1/2"	4 1/2"
5/8" x 6"	1/2"	13/16"	5 1/2"	6 1/2"

Step 1: Drill

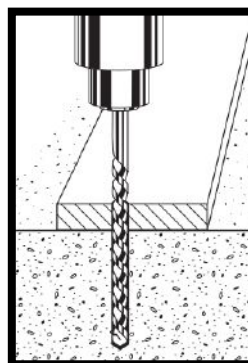

Step 2: Anchor

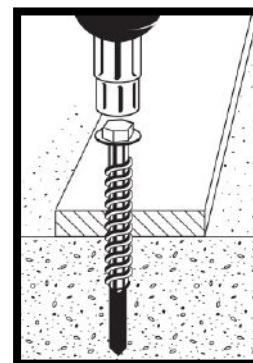

NOTE: Always wear eye protection appropriate to the task at hand.

FA3000S


Included Items:

Part #	Item	Description	Quantity
FA3000S	Tree Base	Play Equipment	1
FA3000S	House	Play Equipment	1
FA3000S	Telescope	Play Equipment	1
FA3000S	1" x 5-3/8" Composite Boards	Play Equipment	2
HK149	1220-F41-K	#12-24 x 2" self drilling deck screws	20
HK006	HDW-10	3/8" x 1-3/4" Button Head Torx Pin-in Bolt, SS	12
HK006	HDW-24	3/8" Flat Washer, SS	12
HK006	HDW-15	3/8" Split Lock Washer, SS	12
HK134	HDW-33	1/4" x 1" Button Head Bolt, SS	4
HK134	HDW-42	1/4" Nylock Nut, SS	4
HK134	HDW-34	1/4" Flat Washer, SS	8
HK130	HDW-18	5/8" x 4" Tapcon Anchor	8


Anchor Bolt Installation:

Anchor Bolt Size	ANSI Standard Drill Bit Diameter	Anchor Head (Socket Size)	Minimum Embedment	Hole Depth
1/2" x 3"	7/16"	3/4"	2 1/2"	3 1/2"
5/8" x 4"	1/2"	13/16"	3 1/2"	4 1/2"
5/8" x 6"	1/2"	13/16"	5 1/2"	6 1/2"

Step 1: Drill

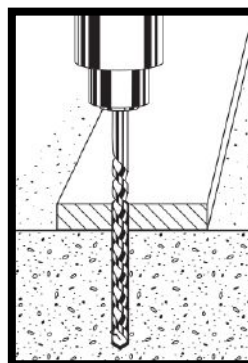

Step 2: Anchor

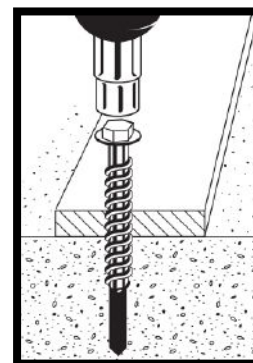

NOTE: Always wear eye protection appropriate to the task at hand.