



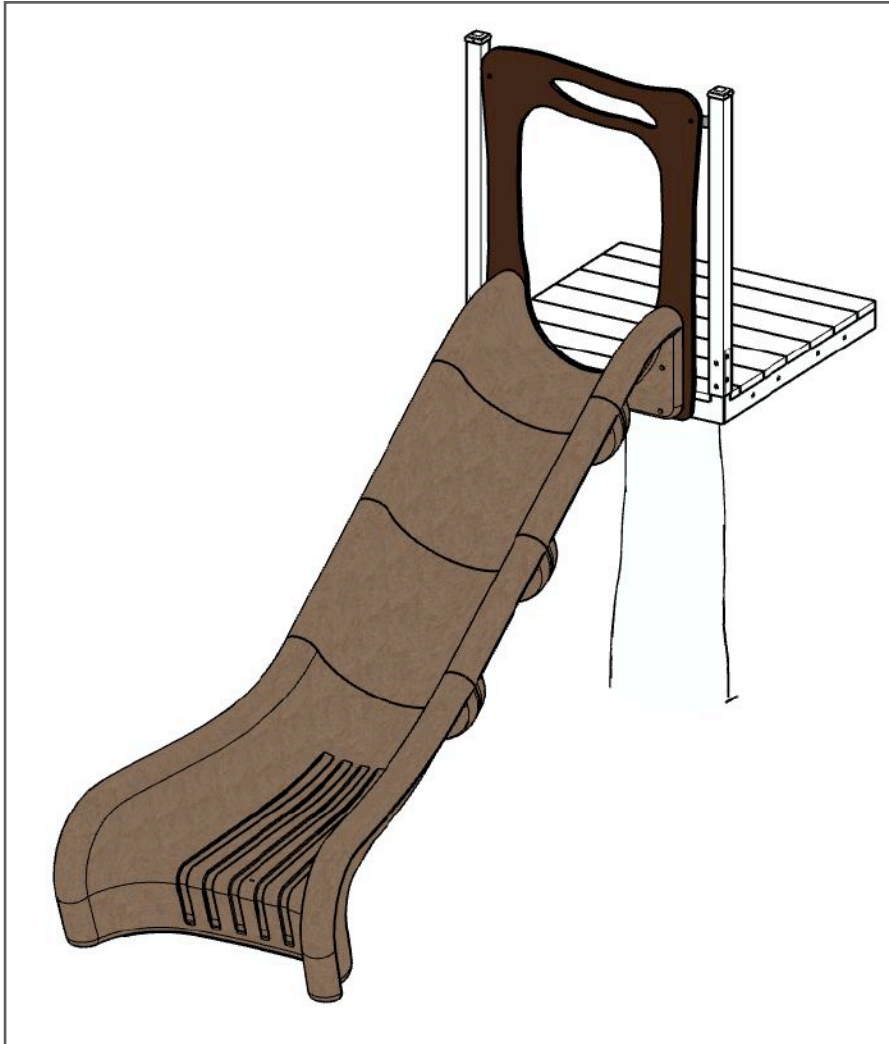


L: 5' 2"
W: 3' 3"
H: 3' 0"
125 LBS

In-ground - Sectional Slide

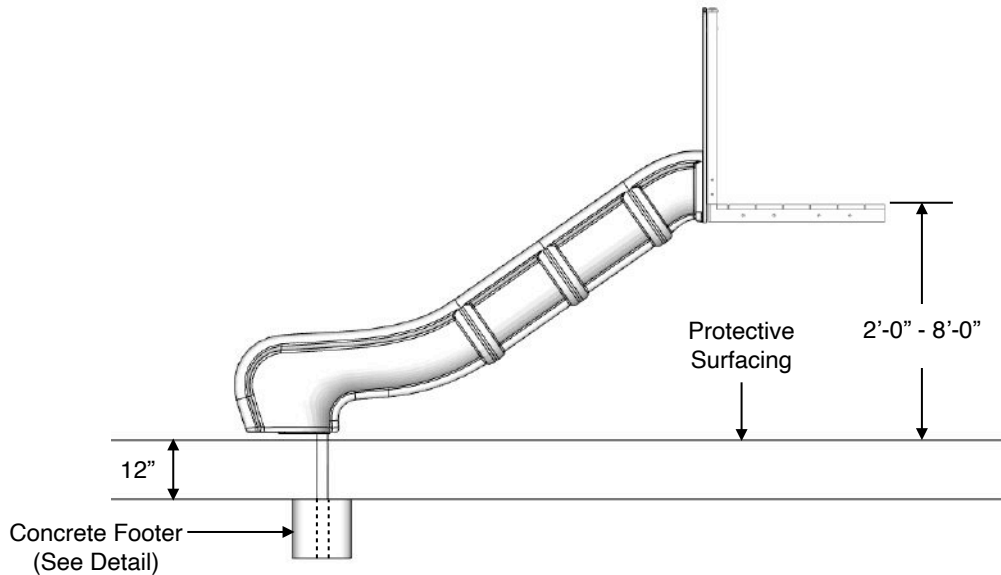


FA4710
Sectional Slide Entrance/Exit
(Dynamic Descent)

In-ground - Sectional Slide

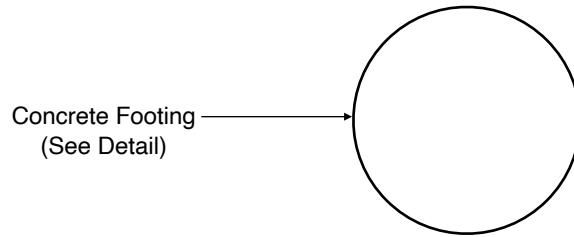

Concrete Footing Plan

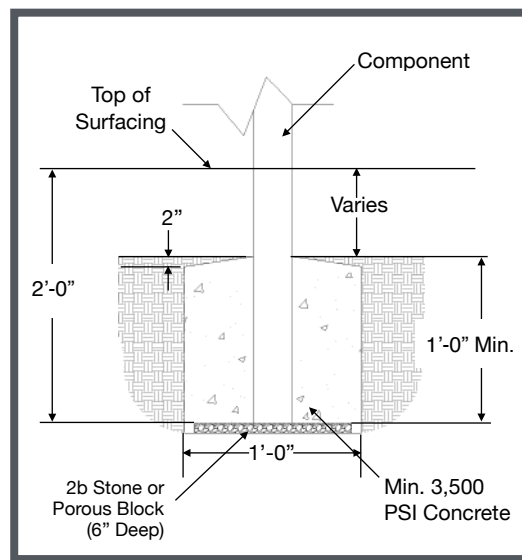


Typical Component Footing Detail

Check local soil conditions.
(Not to Scale)

Footing Notes


- Do not encase the bottom of the support post in concrete. Place the post directly on packed stone.
- The footings shown in this document are recommendations based on historical performance in average soil conditions. Footing dimensions may be modified by owner based on actual soil conditions. Before changing footing dimensions, we strongly recommend the footings be reviewed and approved by a registered engineer.
- The base of the footings must be below the frost line.
- Assemble the entire play structure before pouring concrete unless instructed to do so in the individual play component.

In-ground - Sectional Slide

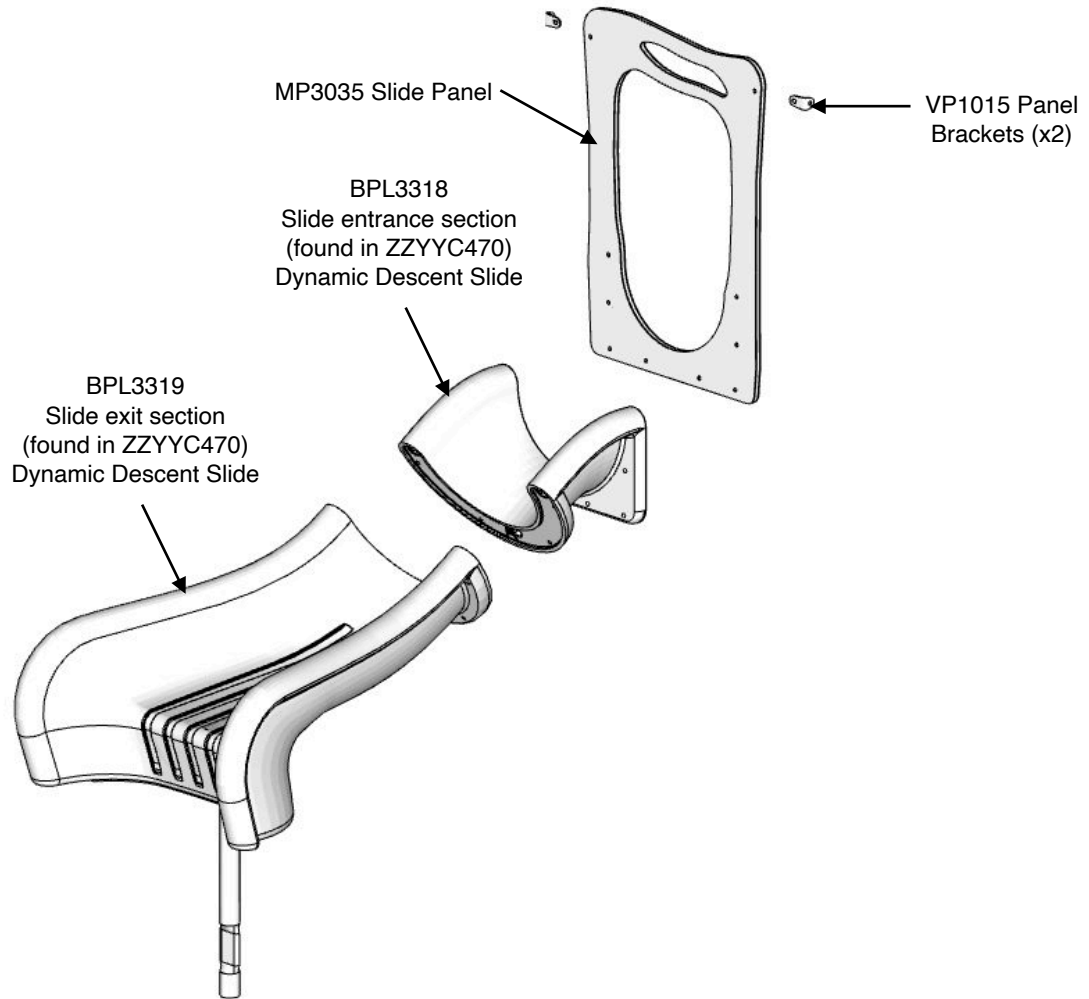


Exploded View


In-ground - Sectional Slide

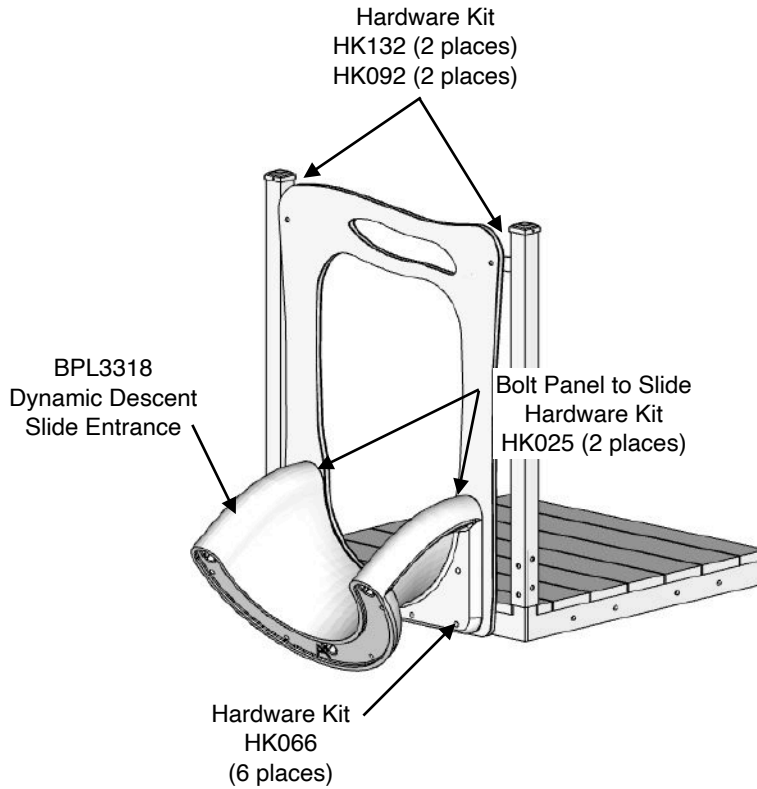

2' to 8' Deck Height

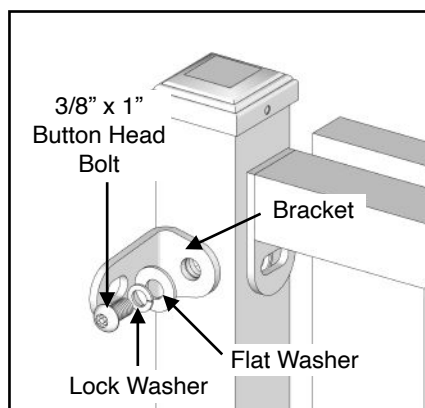

Hardware Detail HK132

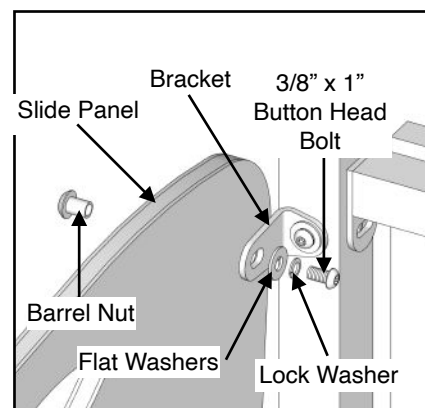

Hardware Detail HK092

Use thread lock on all fasteners.
Cut bolt ends off with more than 2 exposed threads.

In-ground - Sectional Slide

NOTE: Read installation instructions thoroughly before starting installation process.

Step 1: Lay out the area and prepare the site for install. Concrete must be installed over a solid, level base. Check local soil condition and codes. See product installation instructions for minimum use zone requirements to ensure proper spacing and adequate surfacing area.

Step 2: Refer to the typical in-ground footing detail on excavating a hole for the Component.

Step 2: Attach the slide panel to the slide using hardware kit HK025 (2 places).

Step 3: Bolt the VP1015 brackets to the posts using hardware kit HK132 (2 places).

Step 4: Place the slide assembly into its location. Bolt the slide to the deck using hardware kit HK066 (6 places).


Step 5: Bolt the VP1015 brackets to the slide panel using hardware kit HK092 (2 places).

Step 6: Build the rest of the slide per manufacturers instructions and hardware.

Step 8: Place the slide supports into the excavated footings and temporarily brace when level and plumb. Completely build the rest of the Deep Woods Play System **before you pour any concrete.**

Step 9: Once the entire play system is built, pour the concrete footings. The concrete should be flush with the ground level, as shown in the typical in-ground footing detail. Allow time for the concrete to cure completely before continuing.

Step 10: Remove temporary bracing.

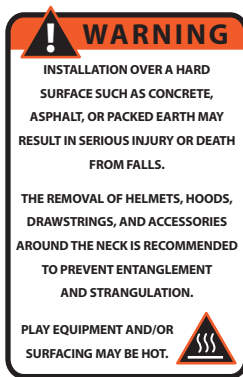

NOTES PRIOR TO CONSTRUCTION:

- Use appropriate equipment to lift and move the play equipment.
- Check local codes and requirements prior to digging or installing any equipment.


NOTE: Always wear eye protection appropriate to the task at hand.

In-ground - Sectional Slide

Included Items:

Part #	Item	Description	Quantity
ZZYYC470	Slide Entry/Exit	Play Equipment	1
MP3035	Slide Panel	Play Equipment	1
HK025	HDW-10	3/8" x 1-3/4" Button Head Torx Pin-in Bolt, SS	2
HK025	HDW-15	3/8" Split Lock Washer, SS	2
HK025	HDW-25	3/8" Small Flat Washer, SS	2
HK092	HDW-44	3/8" x 1" Button Head Torx Pin-in Bolt, SS	2
HK092	HDW-15	3/8" Split Lock Washer, SS	2
HK092	HDW-25	3/8" Small Flat Washer, SS	2
HK092	HDW-31	3/8" x 7/16" Barrel Nut, SS	2
HK132	HDW-44	3/8" x 1" Button Head Torx Pin-in Bolt, SS	2
HK132	HDW-15	3/8" Split Lock Washer, SS	2
HK132	HDW-25	3/8" Small Flat Washer, SS	2
HK132	VP1015	VP1015 Panel Bracket	2
HK066	HDW-12	3/8" x 3-1/2" Button Head Torx Pin-in Bolt, SS	6
HK066	HDW-15	3/8" Split Lock Washer, SS	6
HK066	HDW-25	3/8" Small Flat Washer, SS	12
HK066	HDW-38	3/8" Nylock Nut, SS	6


Surface mount- Sectional Slide

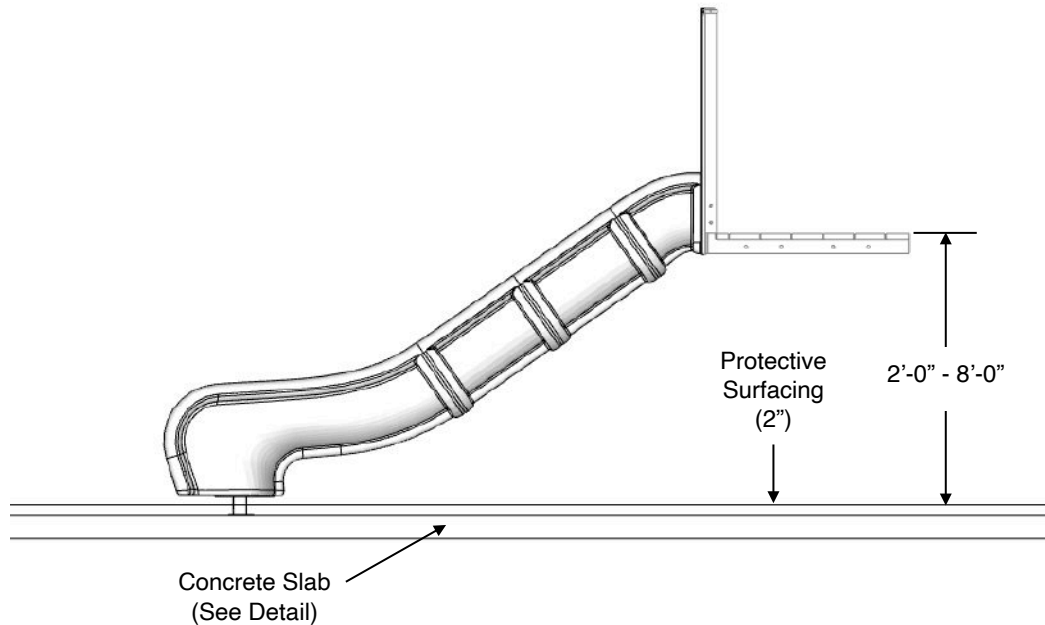

FA4710S
Sectional Slide Entrance/Exit
(Dynamic Descent)

NOTES PRIOR TO CONSTRUCTION:

- Use appropriate equipment to lift and move the play equipment.
- Check local codes and requirements prior to digging or installing any equipment.

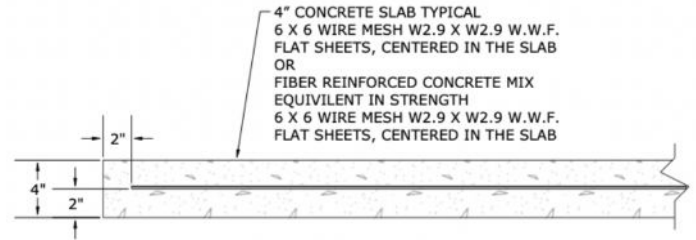


TYPICAL 4" CONCRETE SLAB DETAIL (NOT TO SCALE)
CHECK LOCAL SOIL CONDITIONS.


EXAMPLE OF
COMPONENT



ANCHOR BOLT
SEE CHART

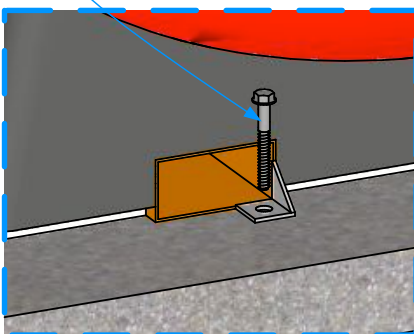


Surface mount- Sectional Slide

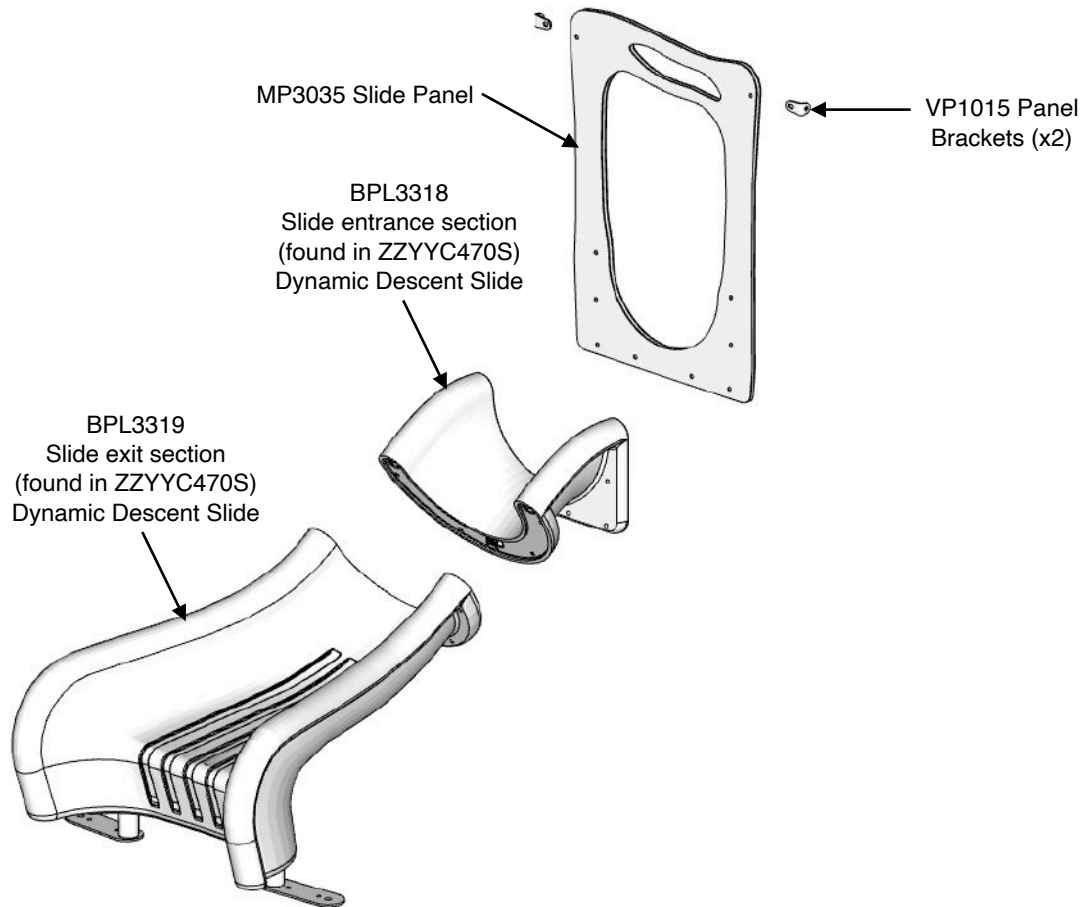


Exploded View


Surface mount- Sectional Slide

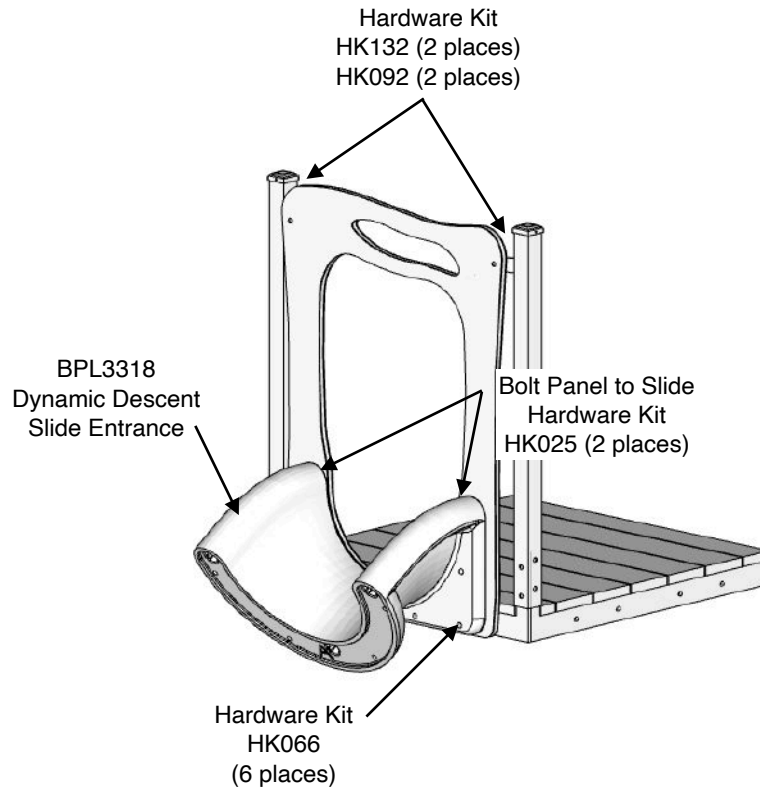

2' to 8' Deck Height

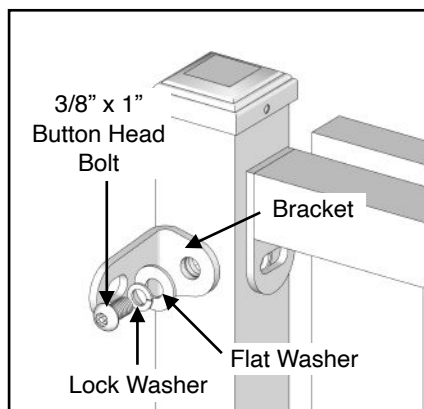

Hardware Detail HK132

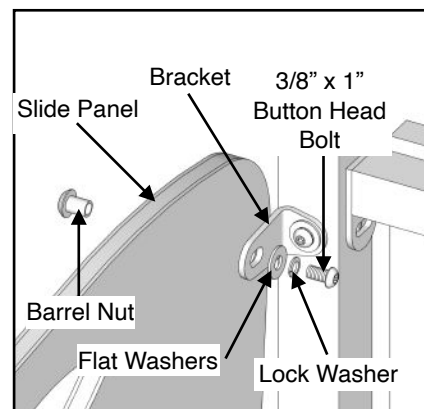

Hardware Detail HK092

Use thread lock on all fasteners.
Cut bolt ends off with more than 2 exposed threads.

Surface mount- Sectional Slide

NOTE: Read installation instructions thoroughly before starting installation process.

Step 1: Review the concrete plan and details specific to your site before installation begins.

Step 2: Attach the slide panel to the slide using hardware kit HK025 (2 places).

Step 3: Bolt the VP1015 brackets to the posts using hardware kit HK132 (2 places).

Step 4: Place the slide assembly into its location. Bolt the slide to the deck using hardware kit HK066 (6 places).

Step 5: Bolt the VP1015 brackets to the slide panel using hardware kit HK091 (2 places).


Step 6: Build the rest of the slide per manufacturers instructions and hardware.

Step 7: Once slide is fully assembled, anchor the slide support using HK128 (4 places).


Anchor Bolt Installation:

Anchor Bolt Size	ANSI Standard Drill Bit Diameter	Anchor Head (Socket Size)	Minimum Embedment	Hole Depth
1/2" x 3"	7/16"	3/4"	2 1/2"	3 1/2"
5/8" x 4"	1/2"	13/16"	3 1/2"	4 1/2"
5/8" x 6"	1/2"	13/16"	5 1/2"	6 1/2"

Step 1: Drill

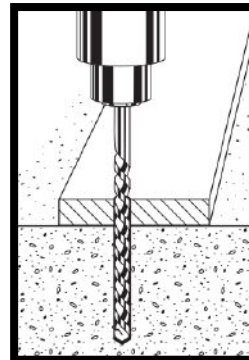

Step 2: Anchor

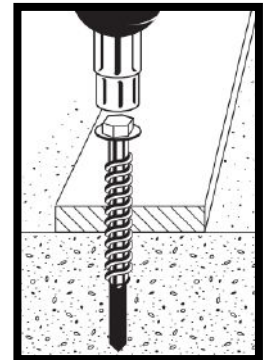

NOTES PRIOR TO CONSTRUCTION:

- Use appropriate equipment to lift and move the play equipment.
- Check local codes and requirements prior to digging or installing any equipment.

NOTE: Always wear eye protection appropriate to the task at hand.

Surface mount- Sectional Slide

Included Items:

Part #	Item	Description	Quantity
ZZYYC470S	Slide Entry/Exit	Play Equipment	1
MP3035	Slide Panel	Play Equipment	1
HK025	HDW-10	3/8" x 1-3/4" Button Head Torx Pin-in Bolt, SS	2
HK025	HDW-15	3/8" Split Lock Washer, SS	2
HK025	HDW-25	3/8" Small Flat Washer, SS	2
HK092	HDW-44	3/8" x 1" Button Head Torx Pin-in Bolt, SS	2
HK092	HDW-15	3/8" Split Lock Washer, SS	2
HK092	HDW-25	3/8" Small Flat Washer, SS	2
HK092	HDW-31	3/8" x 7/16" Barrel Nut, SS	2
HK132	HDW-44	3/8" x 1" Button Head Torx Pin-in Bolt, SS	2
HK132	HDW-15	3/8" Split Lock Washer, SS	2
HK132	HDW-25	3/8" Small Flat Washer, SS	2
HK132	VP1015	VP1015 Panel Bracket	2
HK066	HDW-12	3/8" x 3-1/2" Button Head Torx Pin-in Bolt, SS	6
HK066	HDW-15	3/8" Split Lock Washer, SS	6
HK066	HDW-25	3/8" Small Flat Washer, SS	12
HK066	HDW-38	3/8" Nylock Nut, SS	6
HK128	HDW-16	Anchor Bolt 1/2" x 3"	4