Boulder Bluff

Product: FA3002, FA3002S




A Gr8 addition to the Deep Woods line. Boulder Bluff offers a custom look with Deep Woods modularity. Constructed of durable Glass Fiber Reinforced Concrete (GFRC) steel and composite lumber.






In-ground	Surface mount
FA3002	FA3002S
L: 10’ 3”	L: 10’ 3”
W: 4’ 10”	W: 4’ 10”
H: 7’ 3”	H: 6’ 5”
2,200 LBS	2,000 LBS

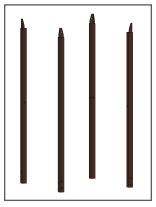

Roof Posts
L: 0’ 2”
W: 0’ 2”
H: 6’ 1”
18 LBS



Roof
L: 4’4”
W: 3’ 10”
H: 1’ 11”
232 LBS



Enclosure
L: 2’ 9”
W: 0’ 9”
H: 0’ 3”
42 LBS

All images and concepts are Copyright © 2025, Cre8Play, LLC-All rights reserved. Cre8Play may change or modify this information as necessary and without notice.


~ All dimensions are approximate ~
~ Heights shown from top of surfacing ~


Last Revised 12/10/25

2401 Edgewood Ave S • Suite 200
St. Louis Park, MN 55426
612.670.8195
info@cre8play.com
cre8play.com

Boulder Bluff

Product: FA3002, FA3002S

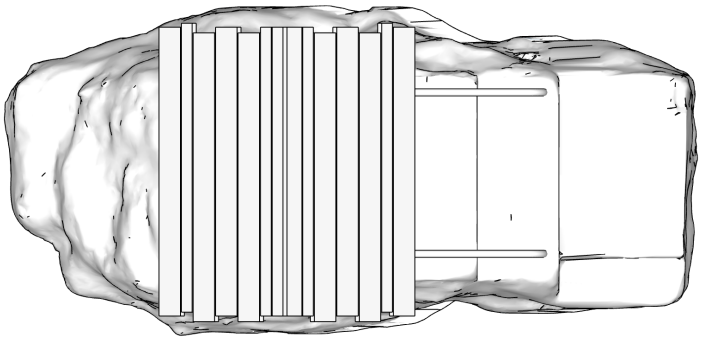

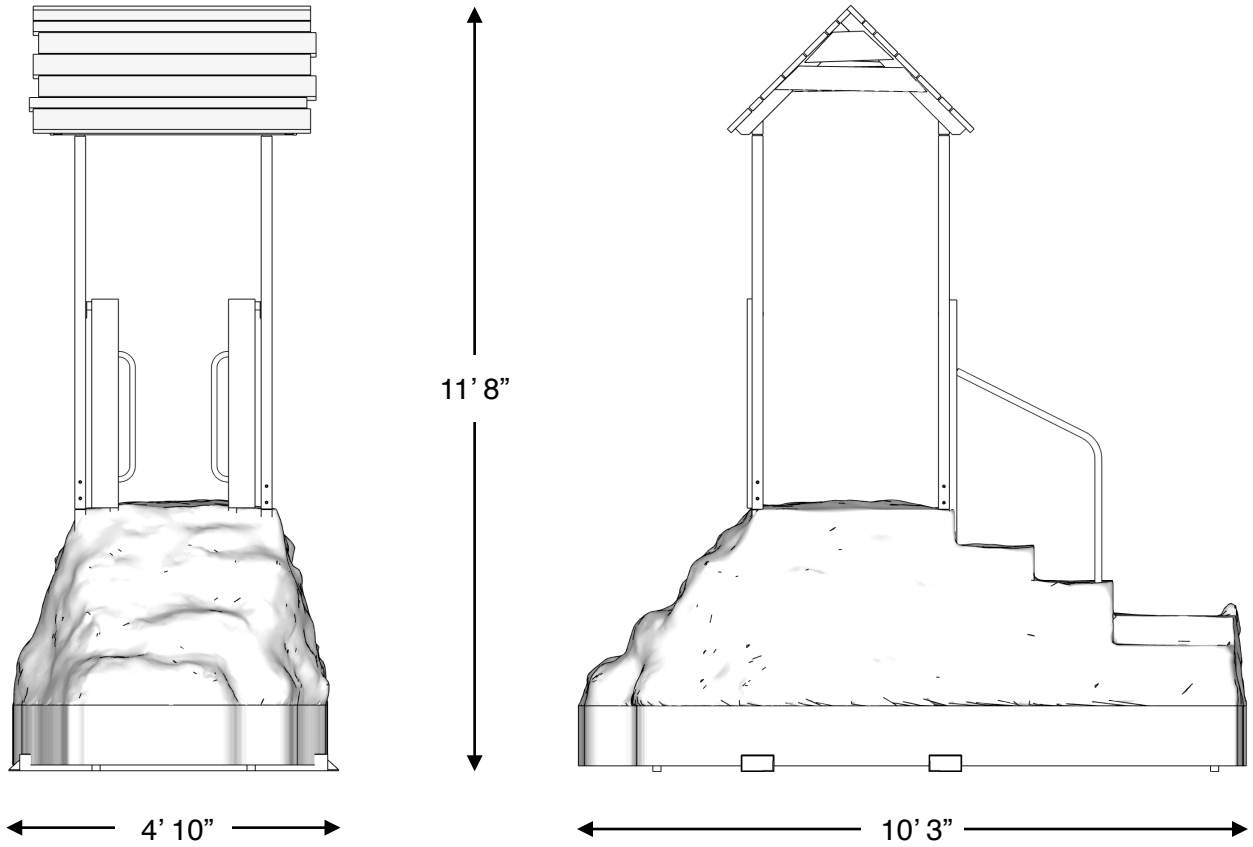


All images and concepts are Copyright © 2025, Cre8Play, LLC-All rights reserved. Cre8Play may change or modify this information as necessary and without notice.

~ All dimensions are approximate ~
~ Heights shown from top of surfacing ~

Last Revised 12/10/25

2401 Edgewood Ave S • Suite 200
St. Louis Park, MN 55426
612.670.8195
info@cre8play.com
cre8play.com

FA3002

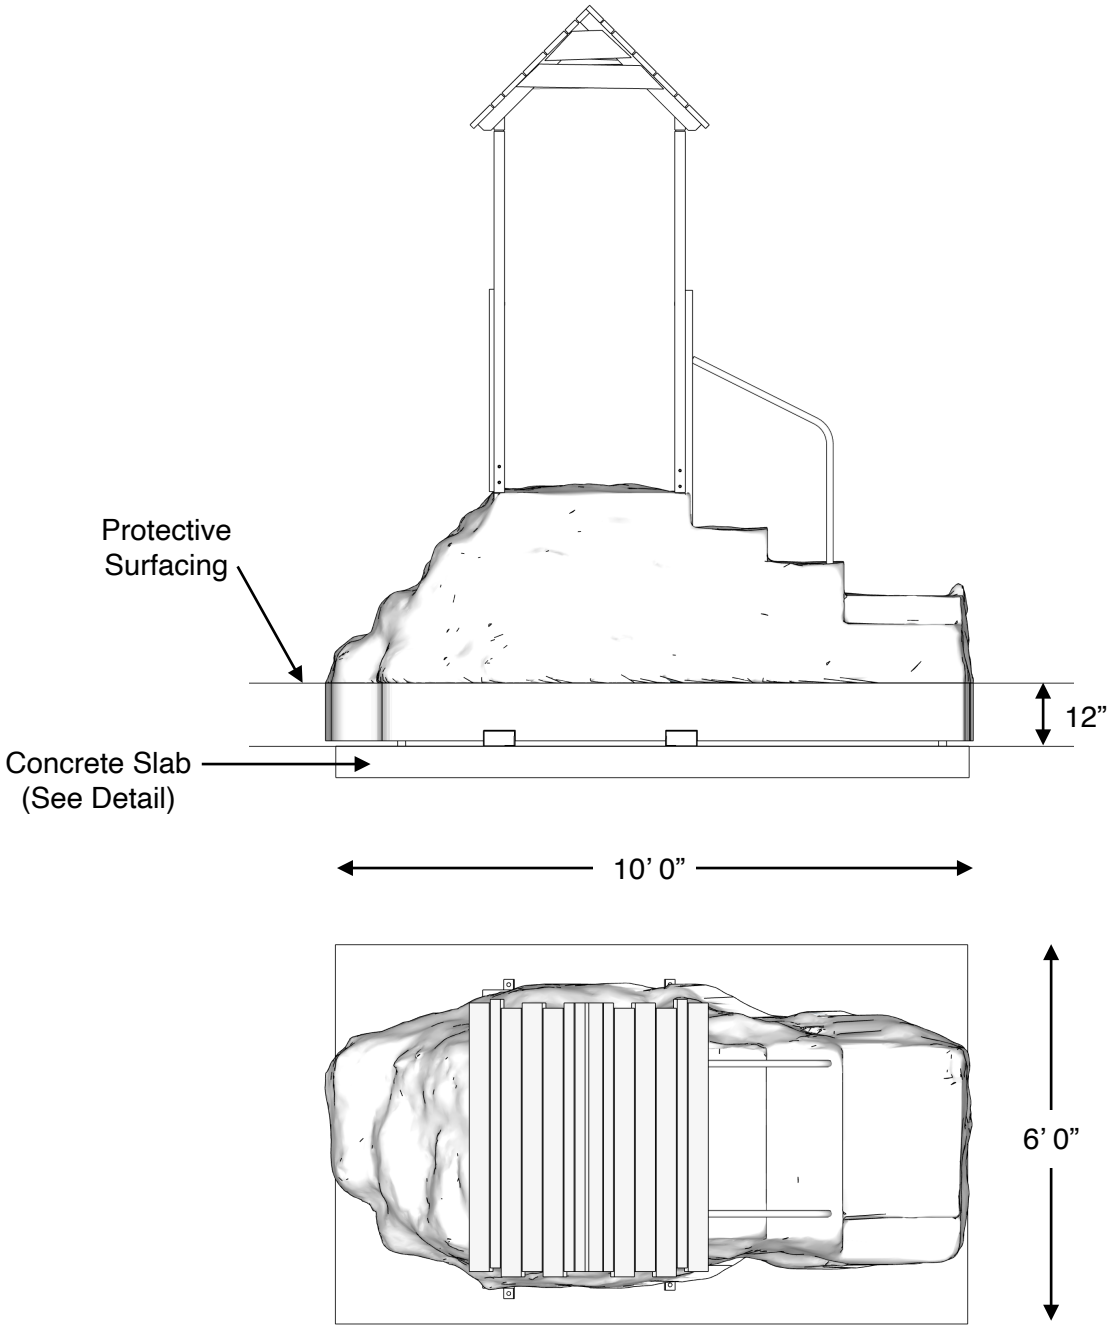

If you determine that less than 12” of surfacing is required, make sure the top of the concrete slab is 12” below the top of the protective surfacing.


All images and concepts are Copyright © 2025, Cre8Play, LLC-All rights reserved. Cre8Play may change or modify this information as necessary and without notice.


~ All dimensions are approximate ~
~ Heights shown from top of surfacing ~

Last Revised 12/10/25

2401 Edgewood Ave S • Suite 200
St. Louis Park, MN 55426
612.670.8195
info@cre8play.com
cre8play.com

FA3002S

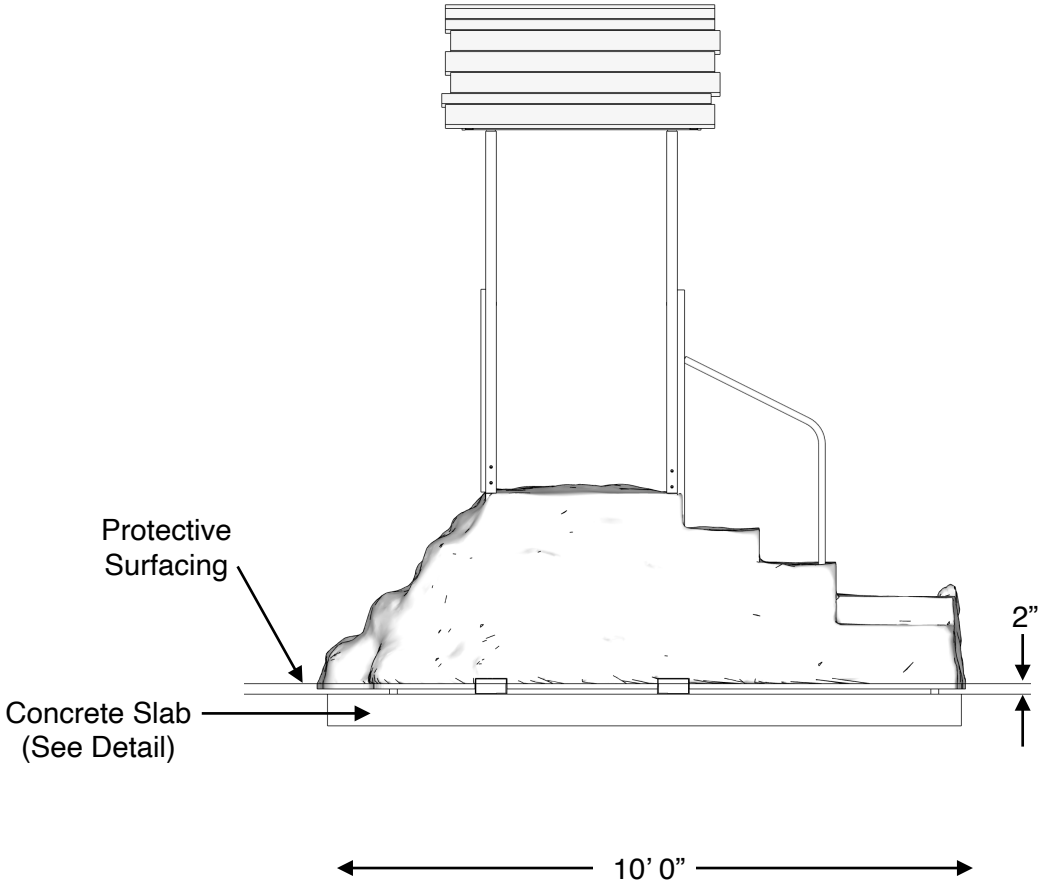

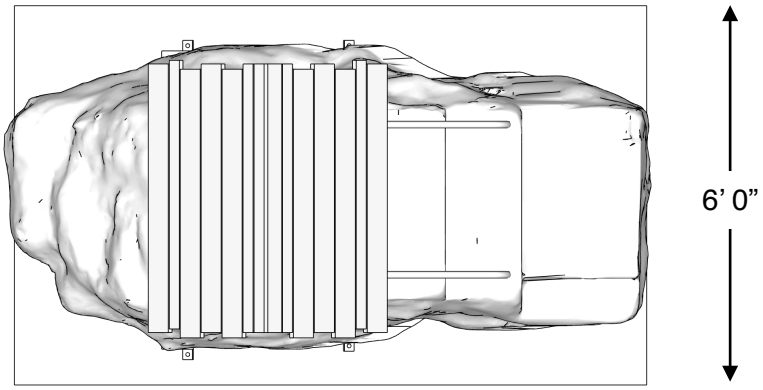

All images and concepts are Copyright © 2025, Cre8Play, LLC-All rights reserved. Cre8Play may change or modify this information as necessary and without notice.


~ All dimensions are approximate ~
~ Heights shown from top of surfacing ~

Last Revised 12/10/25

2401 Edgewood Ave S • Suite 200
St. Louis Park, MN 55426
612.670.8195
info@cre8play.com
cre8play.com

NOTES PRIOR TO CONSTRUCTION:

-Use appropriate equipment to lift and move the play equipment.
-Check local codes and requirements prior to digging or installing any equipment.

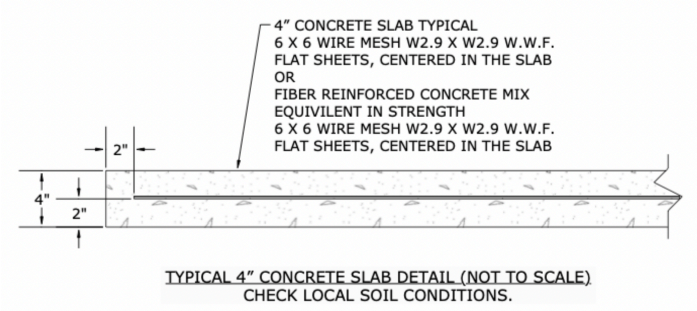

TYPICAL 4" CONCRETE SLAB DETAIL (NOT TO SCALE)
CHECK LOCAL SOIL CONDITIONS.






All images and concepts are Copyright © 2025, Cre8Play, LLC-All rights reserved. Cre8Play may change or modify this information as necessary and without notice.

~ All dimensions are approximate ~
~ Heights shown from top of surfacing ~

Last Revised 12/10/25

2401 Edgewood Ave S • Suite 200
St. Louis Park, MN 55426
612.670.8195
info@cre8play.com
cre8play.com

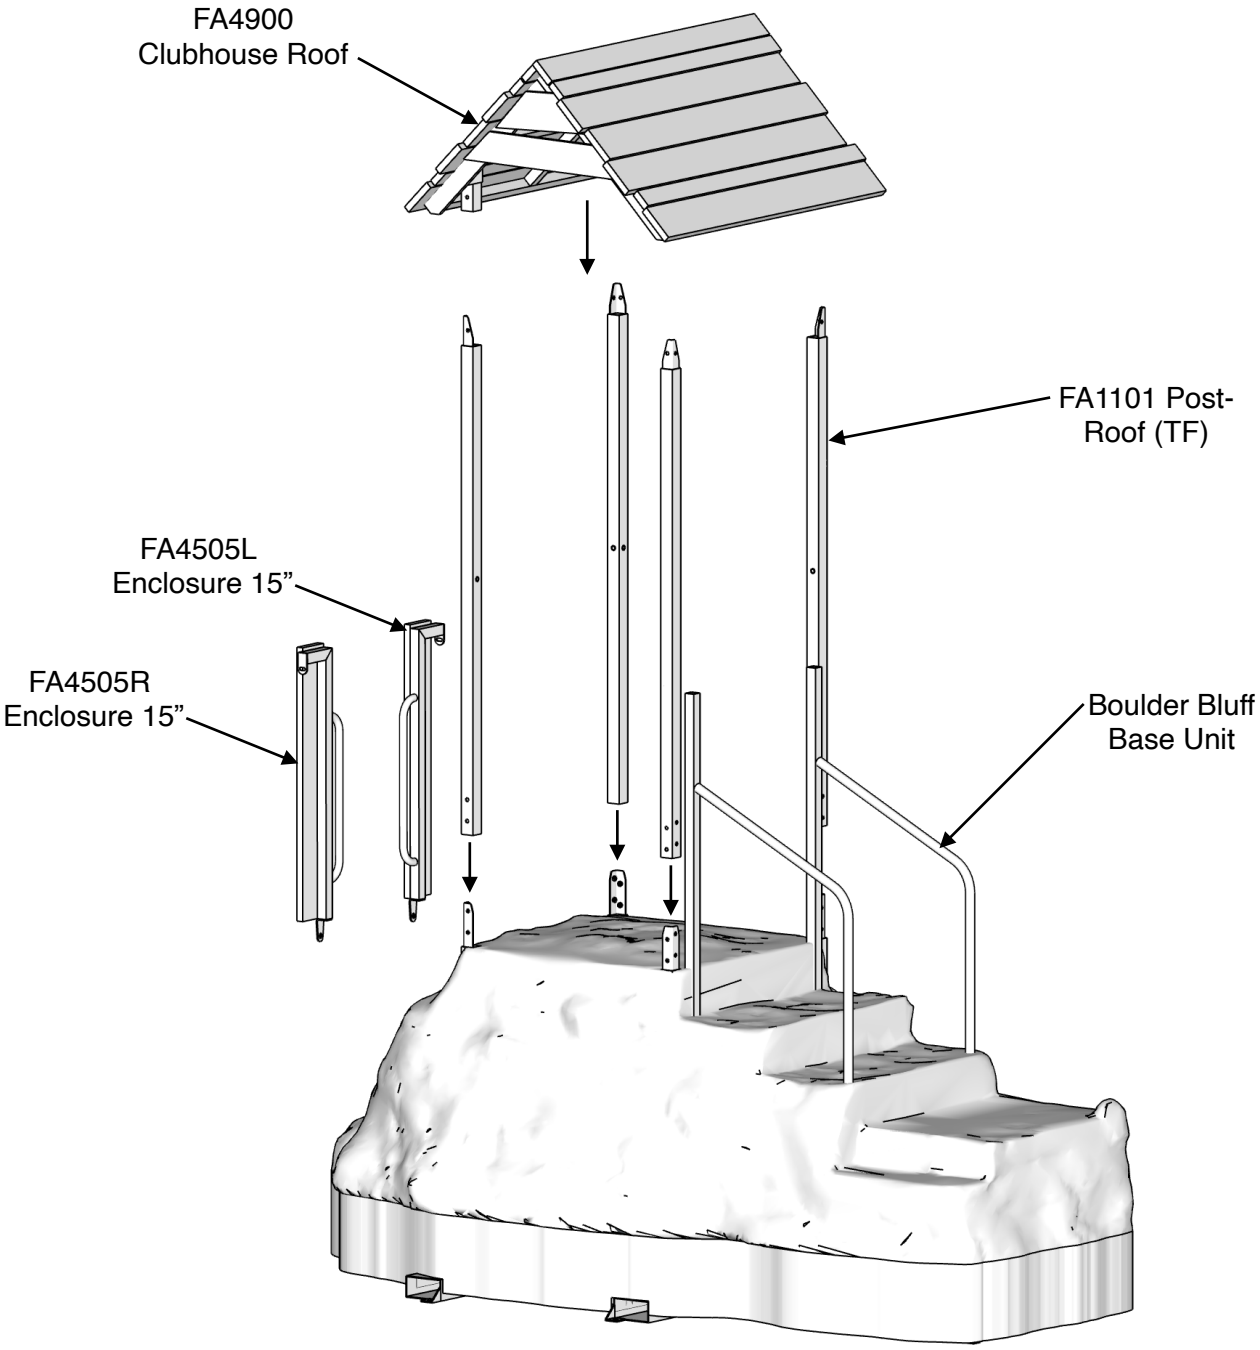

All images and concepts are Copyright © 2025, Cre8Play, LLC-All rights reserved. Cre8Play may change or modify this information as necessary and without notice.

~ All dimensions are approximate ~
~ Heights shown from top of surfacing ~

Last Revised 12/10/25

2401 Edgewood Ave S • Suite 200
St. Louis Park, MN 55426
612.670.8195
info@cre8play.com
cre8play.com

NOTE: Read installation instructions thoroughly before starting installation process.

Step 1: Lay out the area and prepare the site for install. Concrete must be installed over a solid, level base. Check local soil condition and codes. See product installation instructions for minimum use zone requirements to ensure proper spacing and adequate surfacing area.

Step 2: Pour a concrete base for the component. Refer to the typical concrete slab section in this document. The concrete should be flush with the ground level. Allow time for the concrete to completely cure before continuing.

Step 3: Using an appropriate forklift or boom, place component into final installation location. See the hardware recommendation for information on anchoring equipment down to your concrete slab. Refer to the surfacing manufacturer for installation of an approved impact attenuating play surface around the component with a minimum use zone in every direction.

Step 4: Bolt the roof posts to the Boulder Bluff base unit using hardware kit HK022 (16 places).

Step 5: Bolt the roof posts to the Boulder Bluff handrail using hardware kit HK132 (4 places).

Step 6: Bolt the enclosure to the roof posts using hardware kit HK022 (2 places). Bolt the bottom of the enclosure to the Boulder Bluff base unit using hardware kit HK022 (2 places).

Step 7: Bolt the roof to the roof posts using hardware kit HK063 (4 places).


Step 8: Complete building the rest of the Deep Woods components that attach the Boulder Bluff following their individual instructions. Insert the anchor bolt (HK128) into the hole in the fork pocket tab and tighten until the bolt is fully seated. Do NOT over tighten the anchor bolts. See the hardware recommendation for information on anchoring equipment down to your concrete slab. Refer to the surfacing manufacturer for installation of an approved impact attenuating play surface around the component with a minimum use zone in every direction.

All images and concepts are Copyright © 2025, Cre8Play, LLC-All rights reserved. Cre8Play may change or modify this information as necessary and without notice.

~ All dimensions are approximate ~
~ Heights shown from top of surfacing ~


Last Revised 12/10/25

2401 Edgewood Ave S • Suite 200
St. Louis Park, MN 55426
612.670.8195
info@cre8play.com
cre8play.com

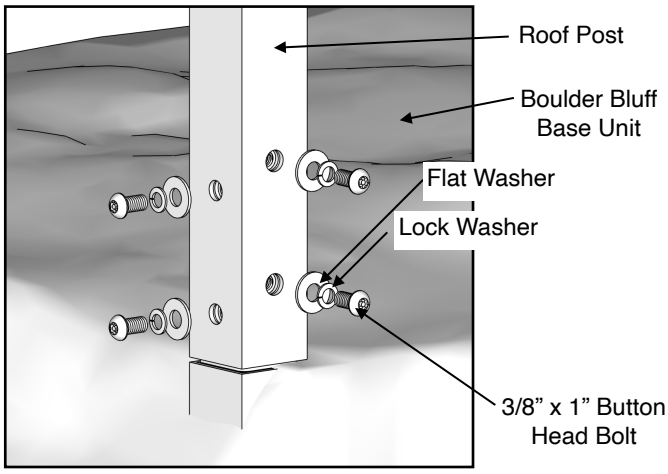


Step 4

Hardware Detail HK022

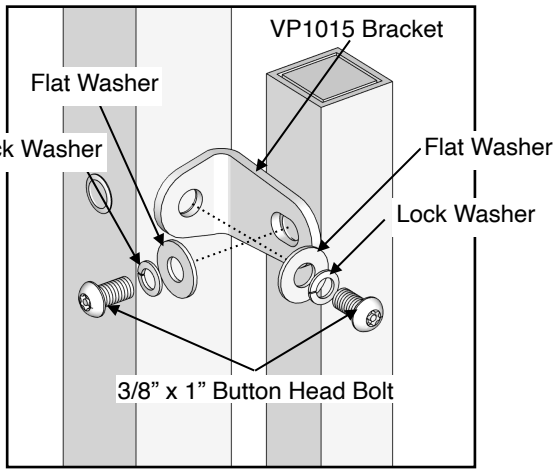


Step 5


Hardware Detail HK132

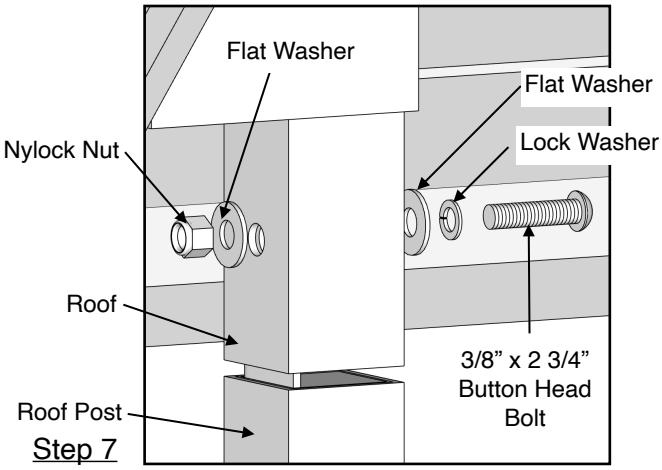

Step 7

Hardware Detail HK063

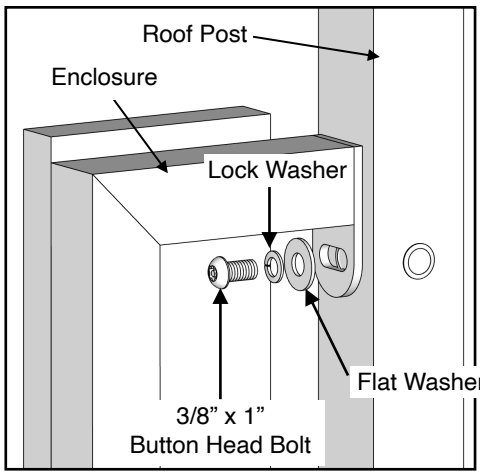

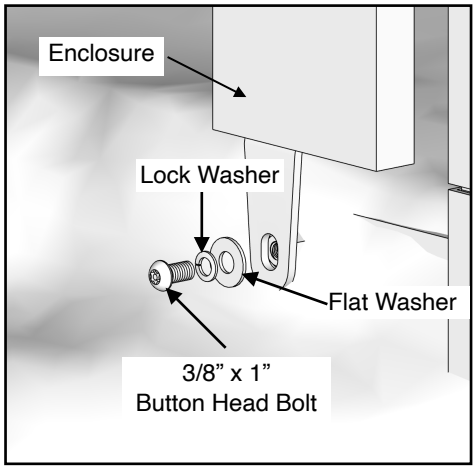

Hardware Detail HK022

Step 6

All images and concepts are Copyright © 2025, Cre8Play, LLC-All rights reserved. Cre8Play may change or modify this information as necessary and without notice.

~ All dimensions are approximate ~
~ Heights shown from top of surfacing ~

Last Revised 12/10/25

Hardware Detail HK022

2401 Edgewood Ave S • Suite 200
St. Louis Park, MN 55426
612.670.8195
info@cre8play.com
cre8play.com

FA3002 - Boulder Bluff


Included Items:

Part #	Item	Description	Quantity
FA3002	Boulder Bluff Base Unit	Play Equipment	1
FA1101	Post-Roof (TF)	Play Equipment	4
FA4900	Clubhouse Roof	Play Equipment	1
FA4505L	Enclosure-15” Opening-Left	Play Equipment	1
FA4505R	Enclosure-15” Opening-Right	Play Equipment	1
HK022	HDW-44	3/8” x 1” Button Head Torx Pin-in Bolt, SS	20
HK022	HDW-25	3/8" x 7/8” OD Flat Washer, SS	20
HK022	HDW-15	3/8" Split Lock Washer, SS	20
HK132	HDW-44	3/8” x 1” Button Head Torx Pin-in Bolt, SS	4
HK132	HDW-25	3/8" x 7/8” OD Flat Washer, SS	4
HK132	HDW-15	3/8" Split Lock Washer, SS	4
HK132	VP1015	Deep Woods Bracket	2
HK063	HDW-05	3/8” x 2-3/4” Button Head Torx Pin-in Bolt, SS	4
HK063	HDW-25	3/8" x 7/8” OD Flat Washer, SS	8
HK063	HDW-15	3/8" Split Lock Washer, SS	4
HK063	HDW-38	3/8" Nylock Nut	4
HK128	HDW-16	1/2” x 3” Tapcon Anchor	4


Anchor Bolt Installation:

Anchor Bolt Size	ANSI Standard Drill Bit Diameter	Anchor Head (Socket Size)	Minimum Embedment	Hole Depth
1/2” x 3”	7/16”	3/4”	2 1/2”	3 1/2”
5/8” x 4”	1/2”	13/16”	3 1/2”	4 1/2”
5/8” x 6”	1/2”	13/16”	5 1/2”	6 1/2”

Step 1: Drill

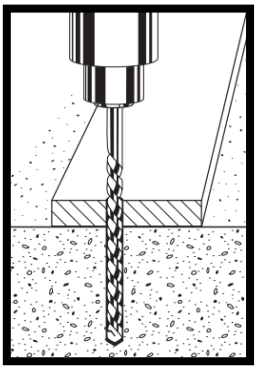

Step 2: Anchor

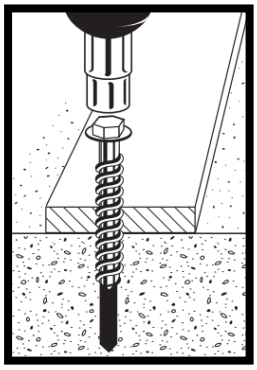

NOTE: Always wear eye protection appropriate to the task at hand.

All images and concepts are Copyright © 2025, Cre8Play, LLC-All rights reserved. Cre8Play may change or modify this information as necessary and without notice.

~ All dimensions are approximate ~
~ Heights shown from top of surfacing ~

Last Revised 12/10/25

2401 Edgewood Ave S • Suite 200
St. Louis Park, MN 55426
612.670.8195
info@cre8play.com
cre8play.com

FA3002S - Boulder Bluff


Included Items:

Part #	Item	Description	Quantity
FA3002S	Boulder Bluff Base Unit	Play Equipment	1
FA1101	Post-Roof (TF)	Play Equipment	4
FA4900	Clubhouse Roof	Play Equipment	1
FA4505L	Enclosure-15” Opening-Left	Play Equipment	1
FA4505R	Enclosure-15” Opening-Right	Play Equipment	1
HK022	HDW-44	3/8” x 1” Button Head Torx Pin-in Bolt, SS	20
HK022	HDW-25	3/8" x 7/8” OD Flat Washer, SS	20
HK022	HDW-15	3/8" Split Lock Washer, SS	20
HK132	HDW-44	3/8” x 1” Button Head Torx Pin-in Bolt, SS	4
HK132	HDW-25	3/8" x 7/8” OD Flat Washer, SS	4
HK132	HDW-15	3/8" Split Lock Washer, SS	4
HK132	VP1015	Deep Woods Bracket	2
HK063	HDW-05	3/8” x 2-3/4” Button Head Torx Pin-in Bolt, SS	4
HK063	HDW-25	3/8" x 7/8” OD Flat Washer, SS	8
HK063	HDW-15	3/8" Split Lock Washer, SS	4
HK063	HDW-38	3/8" Nylock Nut	4
HK128	HDW-16	1/2” x 3” Tapcon Anchor	4


Anchor Bolt Installation:

Anchor Bolt Size	ANSI Standard Drill Bit Diameter	Anchor Head (Socket Size)	Minimum Embedment	Hole Depth
1/2” x 3”	7/16”	3/4”	2 1/2”	3 1/2”
5/8” x 4”	1/2”	13/16”	3 1/2”	4 1/2”
5/8” x 6”	1/2”	13/16”	5 1/2”	6 1/2”

Step 1: Drill

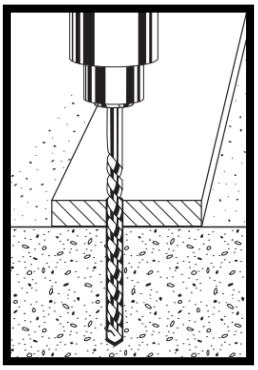

Step 2: Anchor

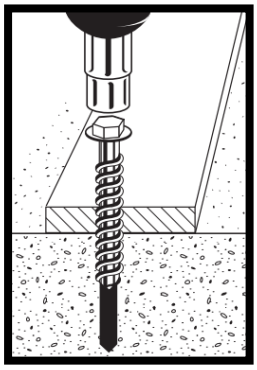

NOTE: Always wear eye protection appropriate to the task at hand.

All images and concepts are Copyright © 2025, Cre8Play, LLC-All rights reserved. Cre8Play may change or modify this information as necessary and without notice.

~ All dimensions are approximate ~
~ Heights shown from top of surfacing ~

Last Revised 12/10/25

2401 Edgewood Ave S • Suite 200
St. Louis Park, MN 55426
612.670.8195
info@cre8play.com
cre8play.com